



Nera F33

# Getting Started







<b>INTRODUCTION</b> .....	<b>5</b>	- <i>ringer</i> .....	24
<i>General</i> .....	5	- <i>answer beep</i> .....	24
<i>Antenna Unit</i> .....	5	- <i>backlight On/Off</i> .....	25
<i>Main Communication Unit - MCU</i> .....	5	- <i>protocol</i> .....	25
<i>Communication services</i> .....	6	- <i>software version</i> .....	26
<i>SIM card</i> .....	9	<i>Selecting default Net service provider</i> .....	26
<b>OPERATION FROM HANDSET</b> .....	<b>10</b>	<i>Setting ports</i> .....	27
<i>Switching ON</i> .....	11	<i>Information available</i> .....	28
<i>Nera ISDN Handset</i> .....	11	<i>Alarm</i> .....	28
<i>Nera F33 starts up</i> .....	12	<b>TELEFAX SERVICE</b> .....	<b>29</b>
<i>Making a call</i> .....	12	<i>General</i> .....	29
<i>Redialing</i> .....	13	<i>Limitations</i> .....	29
<i>Dialing from phone book</i> .....	13	<i>Installation</i> .....	29
<i>Incoming calls to handset</i> .....	14	<i>Transmission</i> .....	29
<i>Call hold and transfer</i> .....	14	<b>DATA SERVICE</b> .....	<b>30</b>
<i>Internal communication</i> .....	15	<i>9.6 kbps data transmission</i> .....	30
<i>Various call procedures</i> .....	15	<i>Installation</i> .....	30
<i>To call Nera F33</i> .....	16	<i>Compressed data transmission</i> .....	30
<i>Phone book entry</i> .....	16	<b>OPERATION FROM PC</b> .....	<b>31</b>
<i>Phone book editing</i> .....	17	<i>Installing the PC program</i> .....	31
<b>HANDSET FUNCTIONS</b> .....	<b>18</b>	<b>MAINTENANCE</b> .....	<b>33</b>
<i>Overview</i> .....	18	<i>General</i> .....	33
<i>Satellite search</i> .....	20	<b>TROUBLESHOOTING</b> .....	<b>34</b>
<i>Satellite Coverage Map</i> .....	21		
<i>Phone setup:</i> .....	23		
- <i>keyclick</i> .....	23		





LIST OF TERMS .....	37	<i>Serial printer settings</i> .....	A-15
APPENDIX A - INSTALLATION .....	A-1	<i>NMEA-0183 input sources</i> <i>(complies with IEC 61162-1)</i> .....	A-16
<i>Location of Antenna Unit</i> .....	A-2	<i>Mounting connector type 11N-50-3-54</i> <i>(for cable RG223)</i> .....	A-17
<i>Coax cable</i> .....	A-3	<i>Mounting connector type 11N-50-7-5</i> <i>(for cables RG214 FRNC)</i> .....	A-18
<i>Optional antenna cable</i> .....	A-3	<i>Mounting connector type 11N-50-10-4</i> <i>(for cable S10172 B-11)</i> .....	A-19
<i>Power source</i> .....	A-3	<i>Mounting connector type 11N-50-12-10</i> <i>(for cable RF 1/2" 50)</i> .....	A-20
<i>Connecting up</i> .....	A-4	APPENDIX B -	
<i>Outline dimensions</i> .....	A-5	CONNECTING UP NERA TA .....	B-1
<i>Mounting handset holder/cradle</i> .....	A-7	APPENDIX B -	
<i>MCU connectors</i> .....	A-8	CONNECTING UP BCS iTA .....	B-3
<i>Connecting up - examples</i> .....	A-10	APPENDIX C -	
<i>ISDN telephones/equipment</i> .....	A-11	TERMINAL IDENTITIES .....	C-1
<i>ISDN bus termination</i> .....	A-12		
<i>ISDN cable lengths</i> .....	A-12		
<i>ISDN wall socket</i> .....	A-13		
<i>ISDN connectors</i> .....	A-13		
<i>Cable pinouts</i> .....	A-14		



All specifications are subject to change without notice.

© Nera SatCom AS, 2003



The Nera F33 terminal fully complies with the R&TTE directive.



## General

The Nera F33 satellite terminal provides 4.8 kbps global speech service via the Inmarsat satellite system.

Nera F33 offers 9.6 kbps telefax, compressed data service and MPDS (Mobile Packet Data Service) within the Inmarsat spot beam coverage, see [Satellite Coverage Map](#).

## Antenna Unit

The **Nera F33 Antenna Unit** consists of:

- Servo stabilized antenna dish with RF-Transceiver
- GPS receiver
- Radome
- Optional tower or mast mounting

## Main Communication Unit - MCU

The **Nera F33 Main Communication Unit (MCU)** - which constitutes the major electronic part - is designed for wall or desktop installation.

The MCU power input is 24VDC -10% to +30%. The maximum power requirement is approx. 110 W.

The MCU supplies 48 VDC power to the Antenna Unit through the coaxial cable.

## Nera ISDN Handset

The handset keypad and built-in display allows dialing and control of the MCU and antenna.

*Antenna Unit mounted on tower*



*Main Communication Unit and Nera ISDN Handset*



*Figure 1 Nera F33 satellite terminal.*



## Communication services

### Global beam service

- **Speech:** - 4.8 kbps


### Spot beam services

- **Speech:** - 4.8 kbps
- **Data:** - 9.6 kbps, built-in compression provides up to 40 kbps
- **MPDS** - Mobile Packet Data Service  
FWD = 64 kbps, RTN = 28 kbps  
Shared channel
- **Telefax:** - 9.6 kbps Group 3 via Terminal Adapter (TA)

### Internal communication

Equipment connected to the various interfaces may communicate with each other via an internal MSN (Mobile Subscriber Number) assigned to each unit.

Figure 2 Additional equipment.

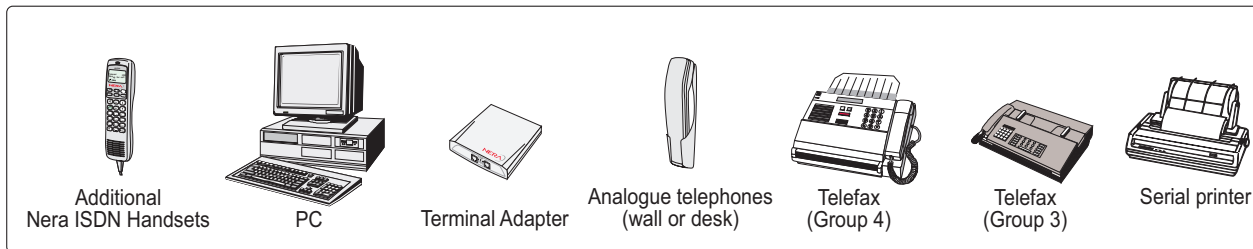

### Control interface

The **RS-232/RS-422** or **USB** port allows connection of a PC for configuration of the Nera F33 MCU. A PC program (vtLite Marine) that provides the software to operate and configure the MCU is supplied on the enclosed CD (requires at least Windows 98).

### CD

The CD ROM supplied with Nera F33 contains:

- program for control from PC (vtLite Marine)
- manuals
- application notes
- modem drivers
- and other useful information.

### Additional equipment

- Additional Nera ISDN Handsets
- PC
- Nera Terminal Adapter for connection of:
  - analogue DTMF telephone(s)
  - group 3 telefax



Radome  
(cutaway view)

Antenna Dish

Servo Stabilized  
Pedestal

GPS Receiver

RF-Transceiver

Fan

Tower (option)

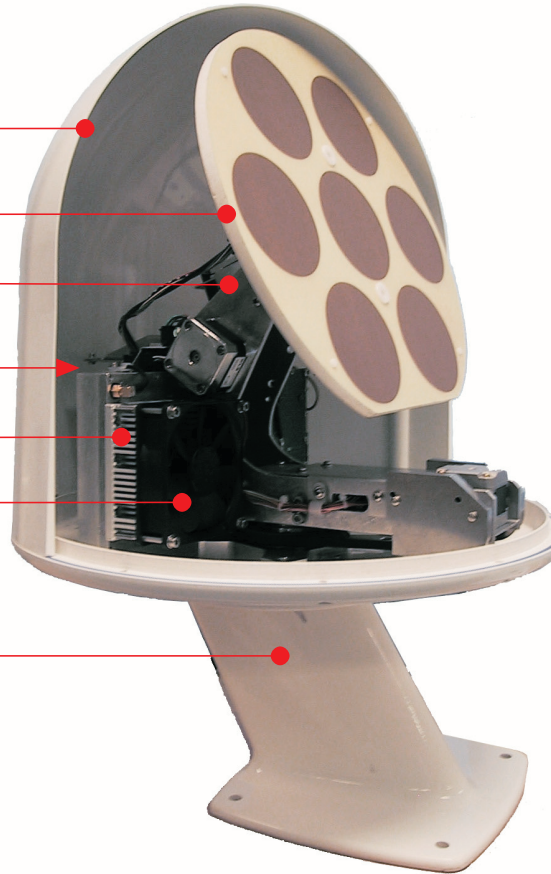



Figure 3 Nera F33 - Antenna Unit parts.



Figure 4 Examples of preprogrammed Terminal Ids and MSN numbers.

**Allows direct connection without prior configuration.**

See also [Routing of incoming calls](#) and [MSN configuration](#) in the **User Guide**.

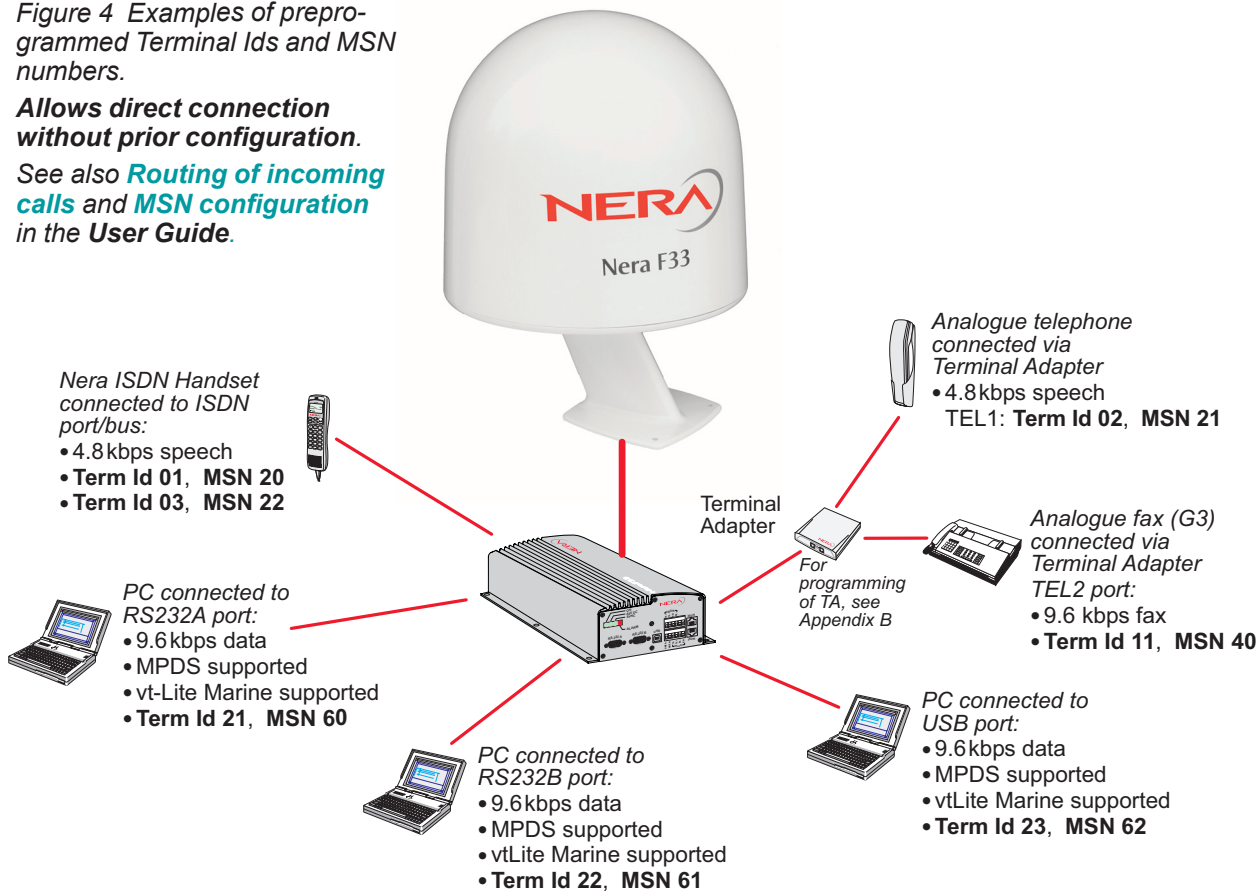





## SIM card

The SIM card carries subscription information from your Net service provider on an integrated circuit. The Nera F33 used with the SIM card assumes the identity of the SIM card.

The SIM card has its own set of Inmarsat Mobile Numbers (IMN) on which the user can be contacted irrespective of the Nera F33 used.

All outgoing calls will be billed to the owner of the SIM card.

The SIM card is protected by a SIM PIN (Personal Identification Number). Contact your Net service provider if you do not have the PIN code.

If the PIN code entered does not match the PIN code on the SIM card, operation with that particular SIM card will lock-up after three failed attempts. You must then use the SIM un-block code (PUK code) provided by your Net service provider to un-lock the card. Contact your Net service provider if you do not have the PUK code.

### Note!

*When the PUK is used, the SIM PIN is set to 1 2 3 4.*

To change or disable the PIN code, see [User Guide > Access level](#) on the enclosed CD.


The SIM card can store various information, e.g.:



- PIN code (Personal Identification Number)
- Phone book
- Allowed Net service providers


*Note! Nera F33 can be used with or without SIM card. The Net service provider, however, sometimes requires the use of SIM card.*

The SIM card is located on the rear panel of the Main Communication Unit, see *figure 6*. The cover must be removed to access the card slot. The cover is attached by two serrated screws. No tools are required to loosen the screws.

*When entering the SIM card, the terminal prompts for SIM PIN:*

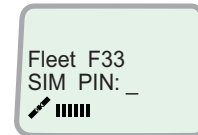

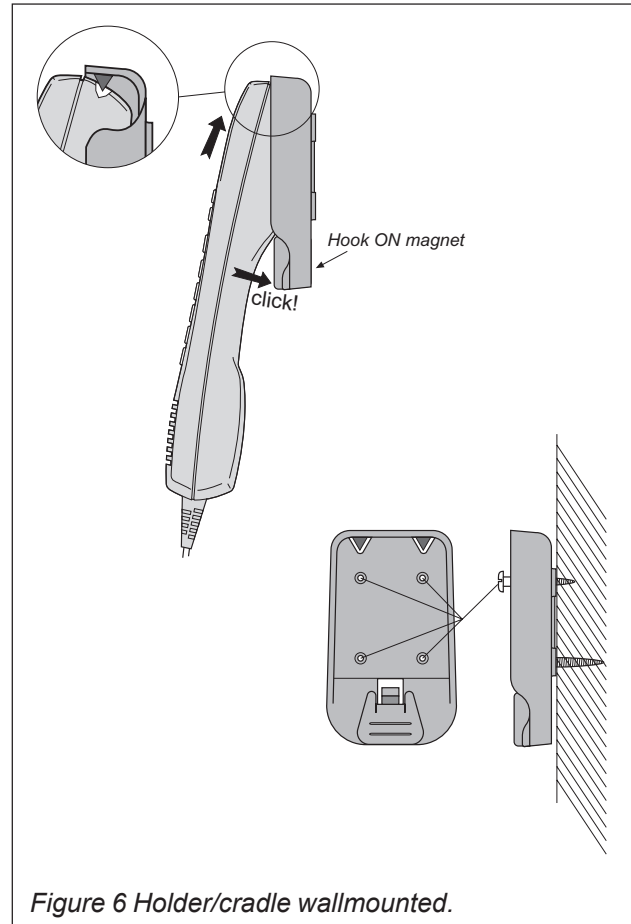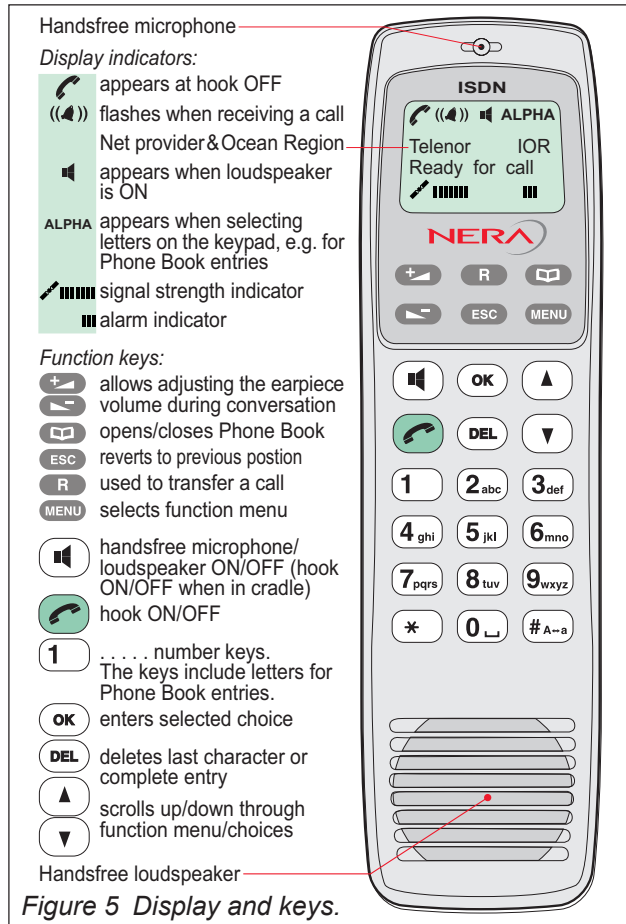

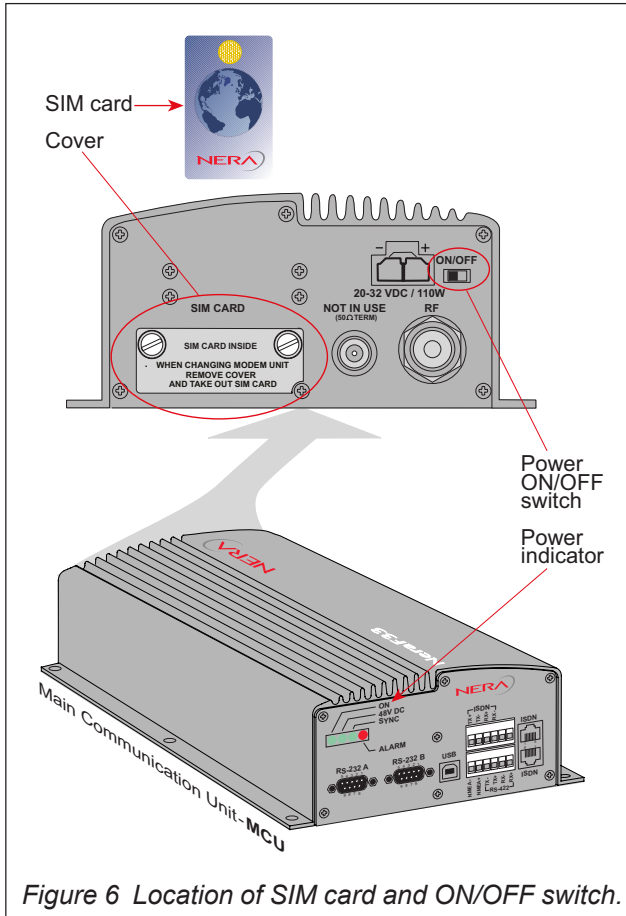

## Switching ON


The **ON/OFF** switch located on the rear panel of the Main Communication Unit switches all basic units of the Nera F33 terminal on/off:

- the Nera ISDN Handset
- the Main Communication Unit (MCU), and
- the Antenna Unit.

See figure 6 for location of the power **ON/OFF** switch and indicator.


### Nera ISDN Handset

When connected initially, the handset is set to *normal mode* (standard ISDN telephone):



Switching to Nera Fleet mode is achieved as follows:

Open the **MENU**

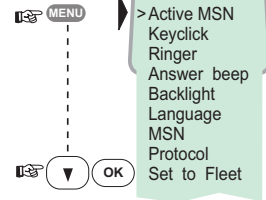

and scroll down to

### Set to Fleet

Pressing **OK** provides an idle display as shown on the next page.


To switch to normal mode, unplug Handset and press and hold down **DEL** when reconnecting it.

For normal ISDN mode, see [Nera ISDN Handset - User Guide](#) on CD.




## Nera F33 starts up

Nera F33 automatically initializes the system and searches for the satellite (handset in Nera Fleet Mode):

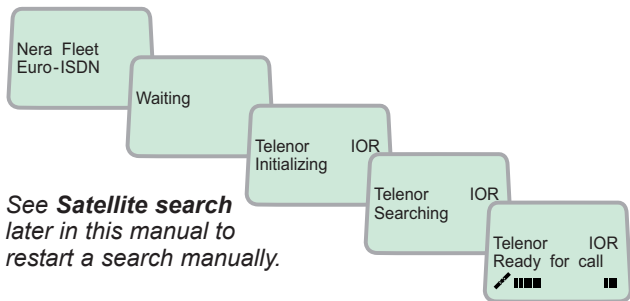


## Idle

When idle, the Nera ISDN Handset displays:

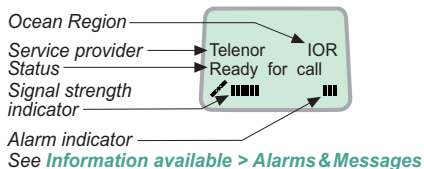


## Making a call

- Dial 00, country code and subscriber number, e.g.:

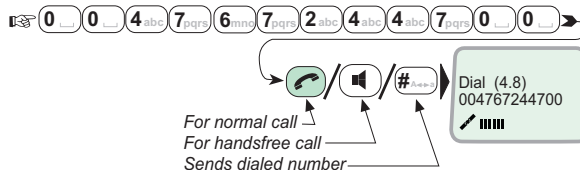

Use DEL to modify entries: (DEL) Pressing DEL once, erases one digit. Holding the key more than 0.5 second erases the whole number.

- When entered, the display reads:




- When the remote end answers, the display reads:



The timer starts.

Dash separates additional dialing  
Timer, minutes:seconds

- End the call by pressing hook ON/OFF (phone icon), or replacing the handset in the cradle.



Use the handsfree key (speaker icon) to toggle the loudspeaker ON/OFF.

Alternative dialing:

Press (phone icon) or (speaker icon) for dialing tone, then dial the number:





## Redialing


The Redial Memory stores the last 30 called and received numbers (incoming IMN numbers are not conveyed from "ashore").  
*The data are erased when disconnecting the handset or Nera F33 is switched off.*

### To redial calls made:

**1** Press the arrow up key to recall the last number dialed:


**2** Use the arrow keys to scroll through the list:

**3** Pressing hook ON/OFF sends the chosen number:

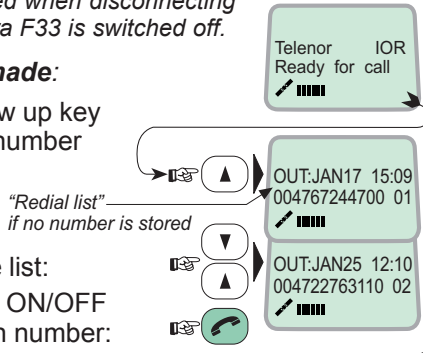


### To view calls received:

**4** Press the arrow down key to recall the last number received. External call  
Scroll through list.

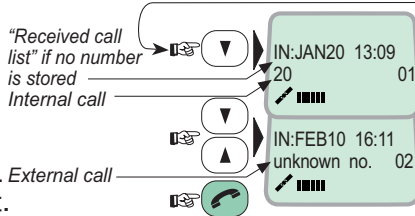


### To delete a listed number:

**5** Press **DEL** to clear the chosen number from list:  
Press **OK** to delete:  
Revert to idle:

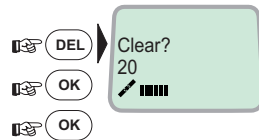


## Dialing from phone book

**1** Press the phone book key:  
and scroll through the phone book:

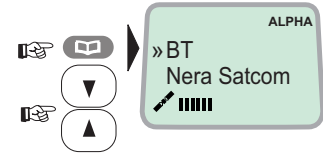

**2** Press the hook key to call the selected number:

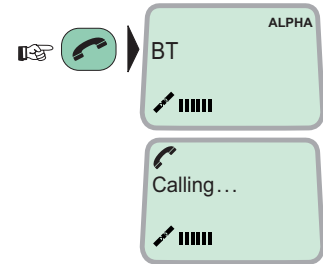



## Incoming calls to handset

The handset rings when receiving a call. The ringing symbol ((📞)) flashes until the call is answered.



- Answer the call by pressing hook ON/OFF: or handsfree:



With the Nera ISDN Handset in the cradle, the loudspeaker and microphone are ON for handsfree operation.

If lifting the handset, the loudspeaker turns OFF.

Use the handsfree key to toggle the loudspeaker ON/OFF.

- End the call by pressing hook ON/OFF , or replacing the handset in the cradle.
- Reject the call by pressing **DEL**:

*Note! If the ringing symbol ((📞)) is displayed when in idle, you have missed a call.*

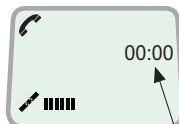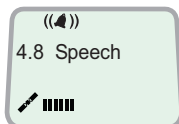

Timer, minutes:seconds

## Call hold and transfer



Pressing during a conversation will put the current call on hold. Another internal call may now be made.

*Switching between the two calls:*

- After putting the 1<sup>st</sup> call on hold by pressing , the 2<sup>nd</sup> call is established by keying:

[MSN] #A-a

- The 1<sup>st</sup> call is put on hold, and the 2<sup>nd</sup> is connected.
- Toggling between the two calls is achieved by pressing repeatedly:

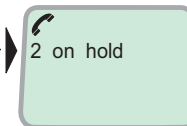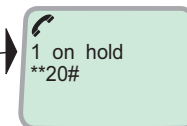

*Call transfer (connection via satellite):*

**MSN/Handset Id**

Hang up

toggles between subscribers

*Exception!*


*Transfer from **analogue** to **ISDN** is not possible.*



## Internal communication

Nera F33 allows calls to be made internally between the connected **ISDN** and **analogue** telephones.


Internal calls:



When receiving a call to an ISDN phone, the caller's MSN number will appear in the display (if programmed).

When Nera F33 is busy with a satellite link data call, it is possible to make internal calls.

Example of internal call connections:

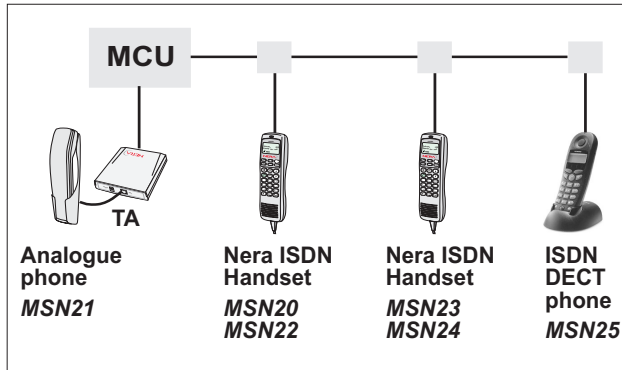

## Various call procedures

### Call from a standard telephone

0 0 4 7 6 7 2 4 4 7 0 0 #

### Short number dialing from Phone Book (prefix 23)

2 3 1 5 # fetches and sends the telephone number stored in the Phone Book under short number 15.

### Short number dialing (prefix 23) through selected Net service provider

4 \* 2 3 1 5 # fetches and sends the telephone number stored under short number 15 via the selected Net service provider (Telenor=no. 4).

### Service calls

Special information services are accessible with 2-digit service address code.

*Note! Not all Net service providers offer every service.*

Example:

Calling the technical staff of the Land Earth Station (LES): 3 3 #

### Telefax

On a telefax with keypad, enter # as the last digit before starting transmission:

0 0 4 7 6 7 2 4 4 6 2 1 # START

*Note! Some types of equipment do not have # implemented in software even if the #-key is on the keypad. Then in front of the telephone number use:*

903 if dialing the number digit by digit, or

902 if for the number to be sent as a block. e.g.:

9 0 2 0 0 4 7 6 7 2 4 4 7 0 0



## To call Nera F33

Dial the international prefix (normally 00) followed by **870** and the IMN number, e.g. 00 **870** 762420510.

*The common Ocean Region access no. 870 connects the call to the dialed Nera F33 terminal regardless of the Ocean Region the terminal user currently communicates through.*

*If the PSTN network does not support access no. 870, call the Ocean Region directly:*

- 871 – AOR-E** (Atlantic Ocean Region East)
- 872 – POR** (Pacific Ocean Region)
- 873 – IOR** (Indian Ocean Region)
- 874 – AOR-W** (Atlantic Ocean Region West)

## Phone book entry

The entries in the Nera F33 phone book may consist of maximum 100 numbers. The number/name list is stored in the Main Communication Unit.

*Programming:*

**1** Open the **phone book > menu:**


Open the **Add entry** function by pressing **Ok** before starting to key in characters.

**2** Enter the name, e.g. Nera ASA.

*Note that the additional characters accessible with the key appear momentarily. See the character table on next page.*

*For modifying an entry, see **Phone book editing** on next page.*


*Enter the phone number, continue on next page . . . .*

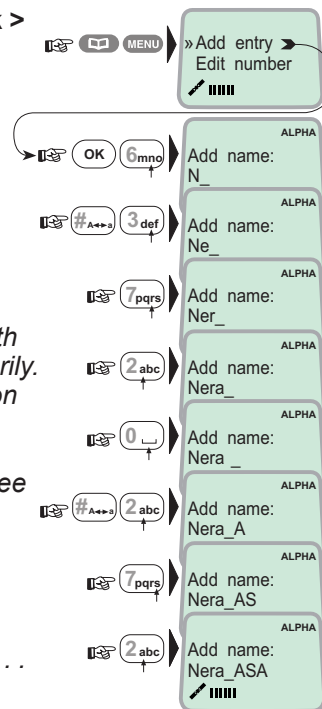







3 Enter the telephone number e.g.:




4 Pressing **OK** stores the entry in the phone book:



An entry can be erased by pressing **DEL**



Revert to idle:



The **character table** shows all the characters accessible:

Notes:

- The # -key toggles between upper-case and lower-case characters.
- Names written with none Anglo-American characters such as Æ, Ø, Å etc., can only contain 6 different special characters (however, 2 equal characters count as 1).

Key	Uppercase	Lowercase
1	., ? ! - : ; / 1	., ? ! - : ; / 1
2 abc	ABC/ÆÅ2	abcæää2
3 def	DEF3	def3
4 abc	GHI4	ghi4
5 jkl	JKL5	jkl5
6 mno	MNOØÖ6	mnoøö6
7 pqrs	PQRS7	pqrs7
8 tuv	TUVÜ8	tuvü8
9 wxyz	WXYZ9	wxyz9
0 _	_0	_0


## Phone book editing

Open phone book menu and scroll down to the required function.

If "Sort by ShrtNo" is selected, the function switches to "Sort by Name".


ALPHA appears when letters are to be entered.

Use **DEL** to modify entries.

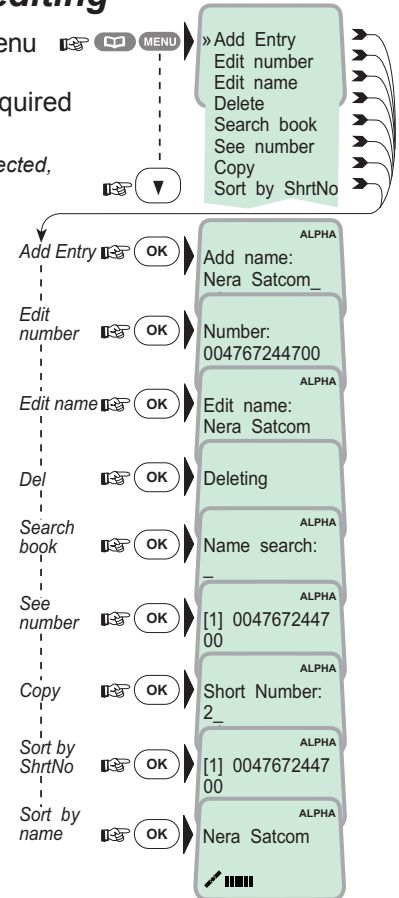




## Overview

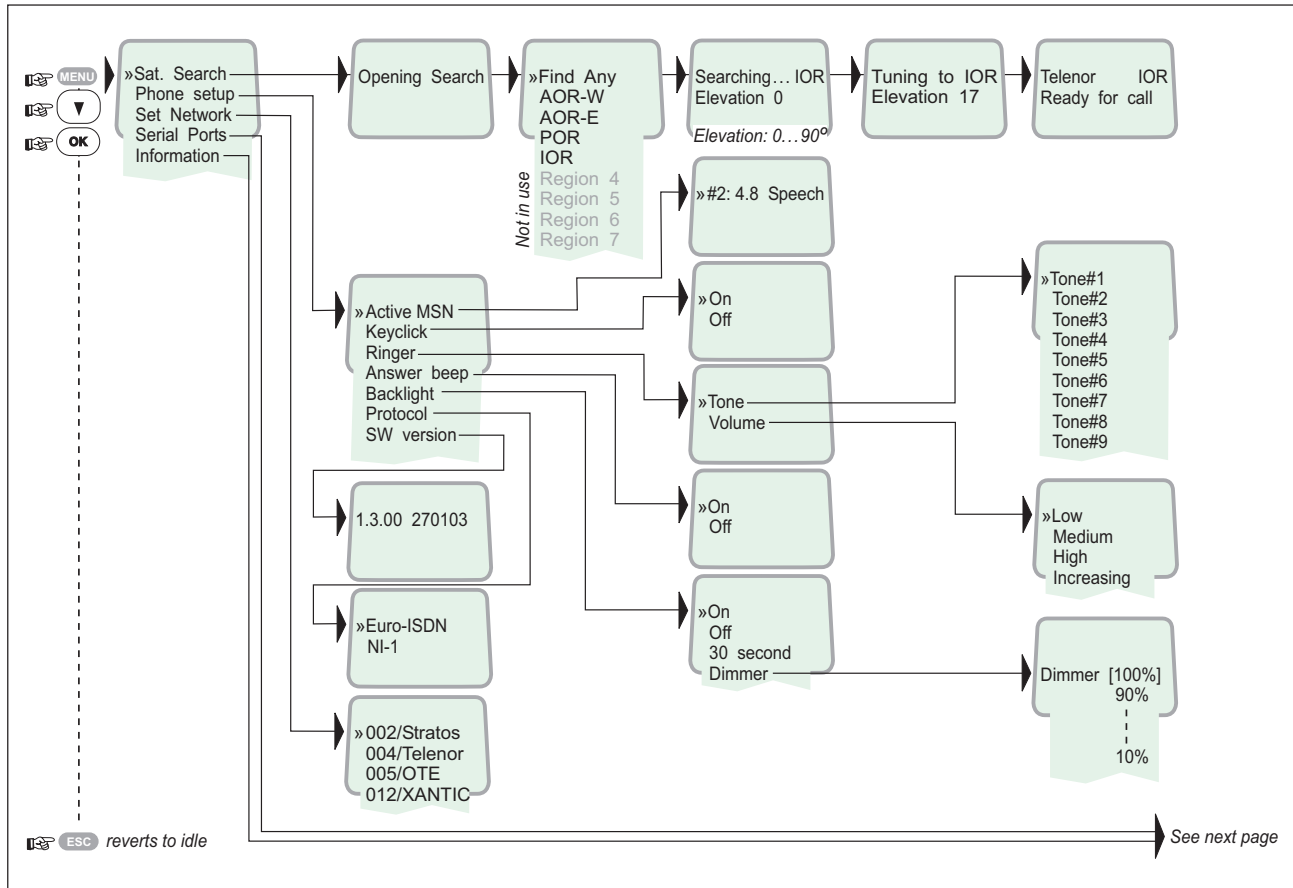



## Overview cont'd

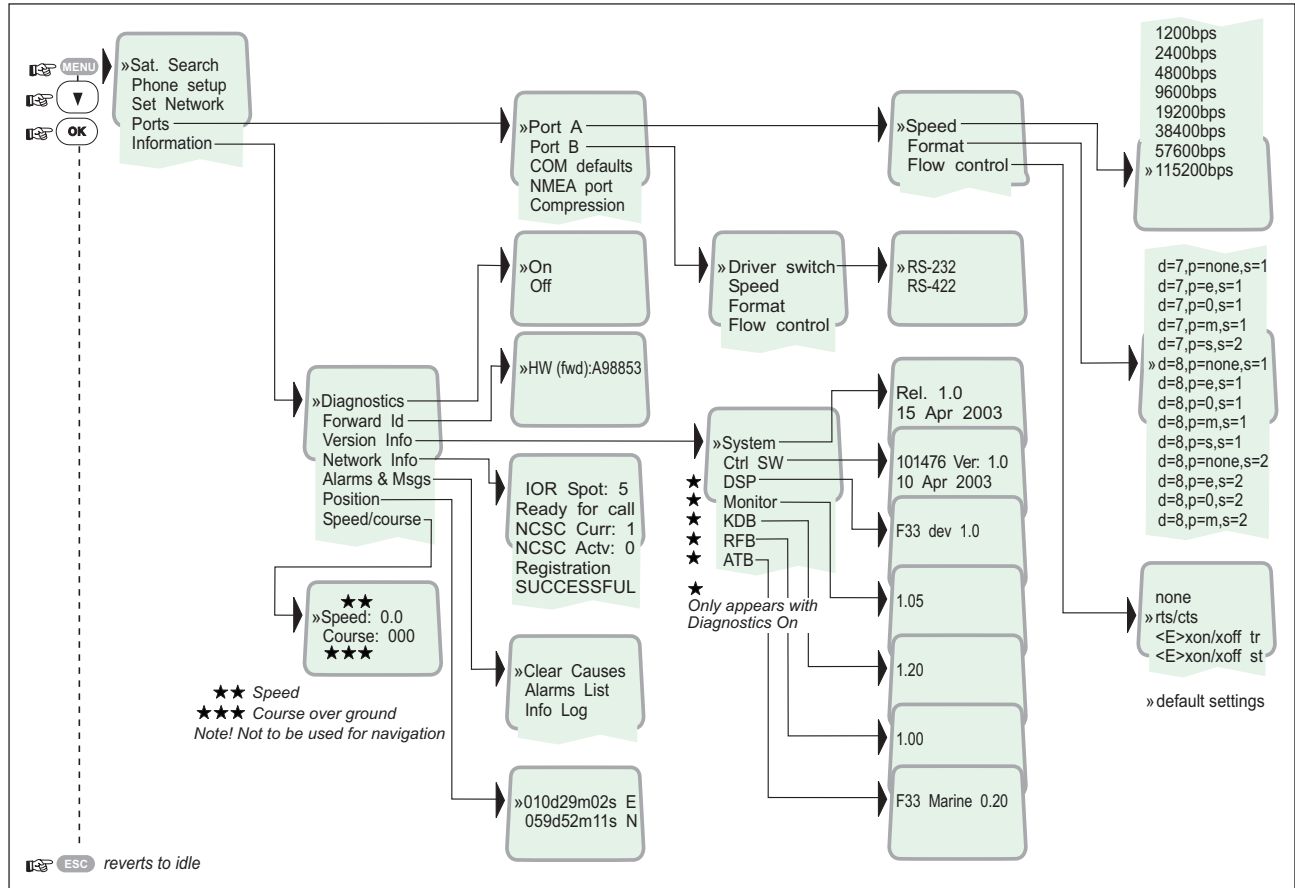



## Satellite search

Some geographic locations allow contact with more than one Ocean Region satellite. It is recommended to choose an Ocean Region providing good signal quality and cost-effective communication.

Use the [Satellite Coverage Map](#) on next pages to select the Ocean Region at your location:

Atlantic Ocean Region West: **AOR-W**

Atlantic Ocean Region East: **AOR-E**


Pacific Ocean Region: **POR**

Indian Ocean Region: **IOR**


Regions 4 - 7 are not in use.

### To select another Ocean Region:


**1** Open the **MENU** and press **Sat. Search**:

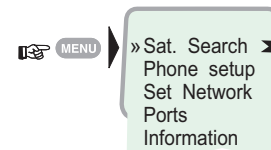

Pressing **OK** opens the list of searching alternatives:

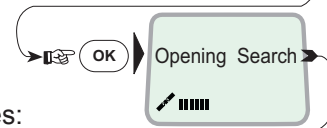


**2** Select as required:

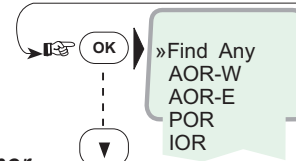

*When selecting **Find Any**, the antenna searches one Ocean Region after the other until a satellite signal is found.*


*When selecting a specific Ocean Region (**AOR-W**, **AOR-E**, **POR** or **IOR**) the system knows the elevation and will find the satellite fast if visible.*

*The antenna performs an hemispheric search at antenna elevation angles varying within 0° through 90°.*

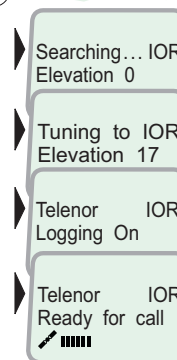




# Satellite Coverage Map

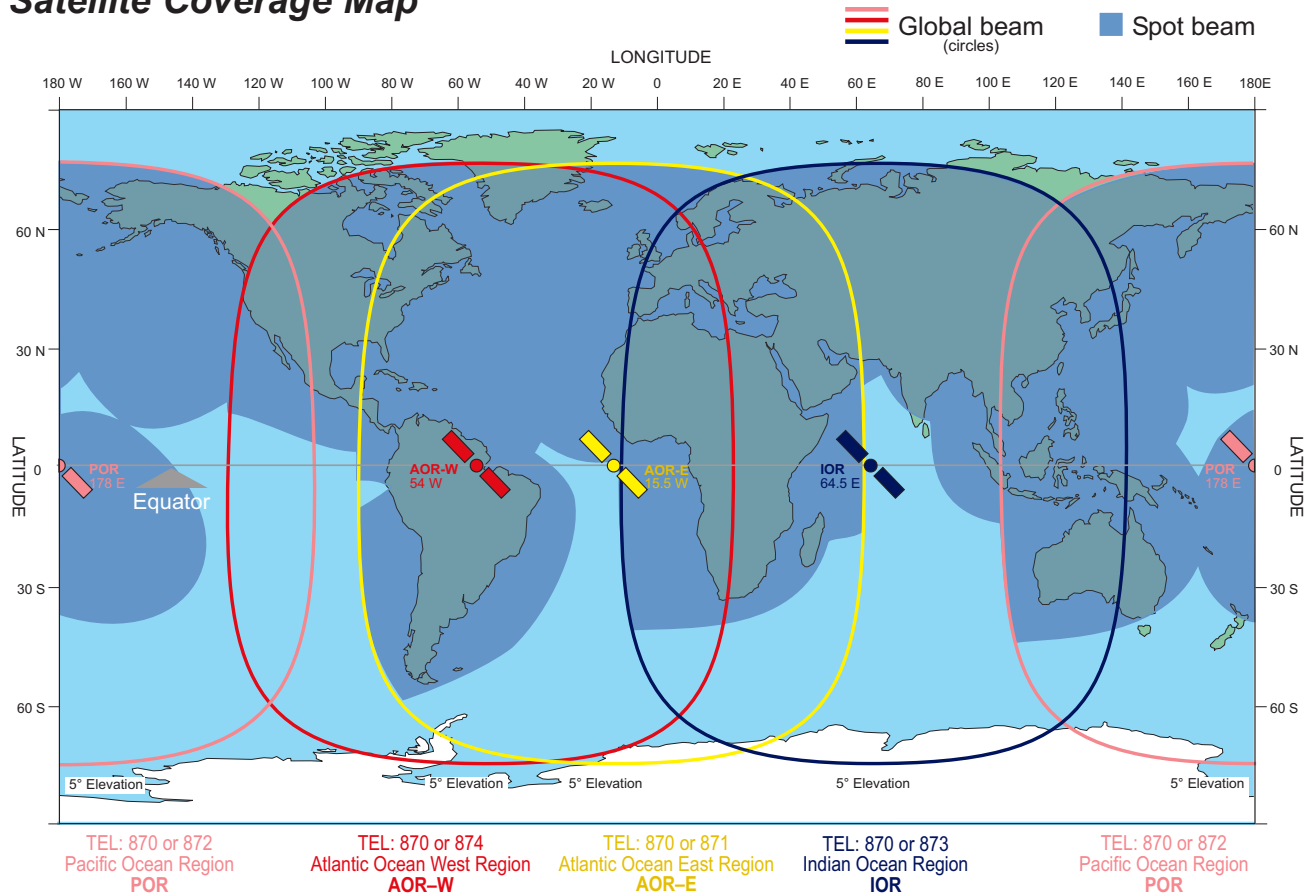




Coverage map for each Ocean Region


AOR-W

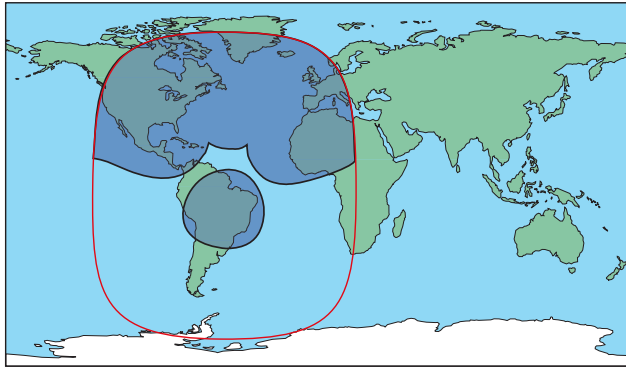


IOR

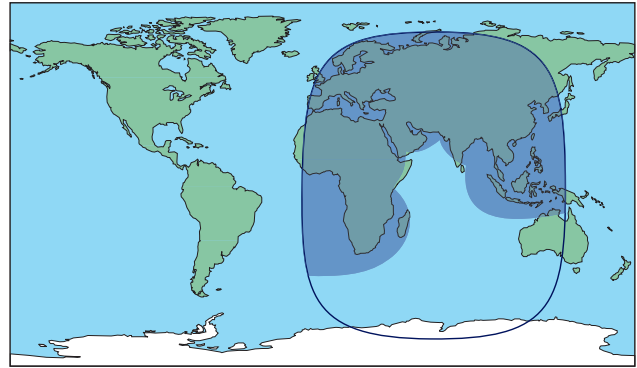

AOR-E

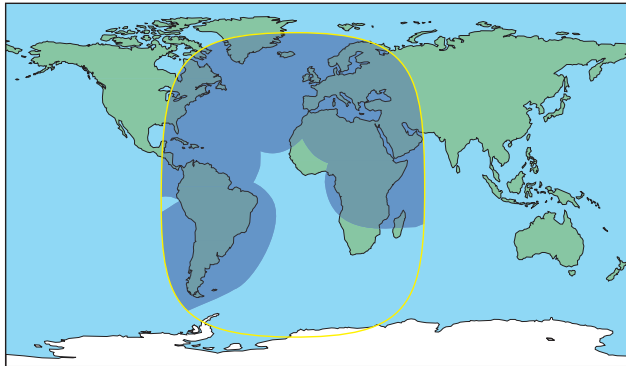

POR

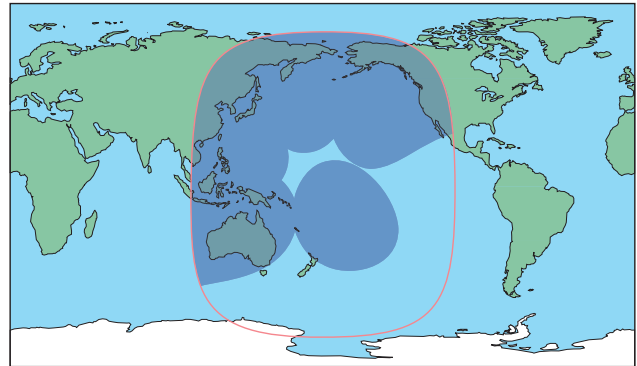



## Phone setup (Nera ISDN Handset)

### Active MSN (Multiple Subscriber Number)

When making a call, the device connected to Nera F33 identifies itself locally by its MSN number.

The first Nera ISDN Handset connected has the following MSN numbers:


Terminal Id	MSN number	Speech quality
01	20	4.8 Speech
03	22	4.8 Speech

### Keyclick


When activated, a click is heard when pressing a key.

The keyclick can be turned on/off as follows:


**1** Open the **MENU** and scroll down to **Phone setup**:

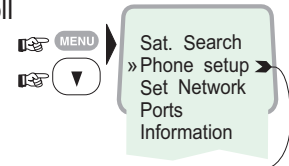

**2** Select the **Keyclick** function:



**3** Press **OK** and scroll to On or Off, as required:



**4** Press **OK** to store the setting.

**Ringer**

The tone sound and level heard when the phone rings may be selected as follows:

**1** Open the **MENU** and select **Phone setup > Ringer**:

**2** Press **OK** to select the **Tone** function:


**3** Press **OK** again and scroll down to required tone:

Press **OK** to store the selected one.

**4** Select the **Ringer** function again and scroll down to the **Volume** function:

**5** Pressing **OK** lists the choices:

Scroll down to required sound level, and press **OK** to store it:

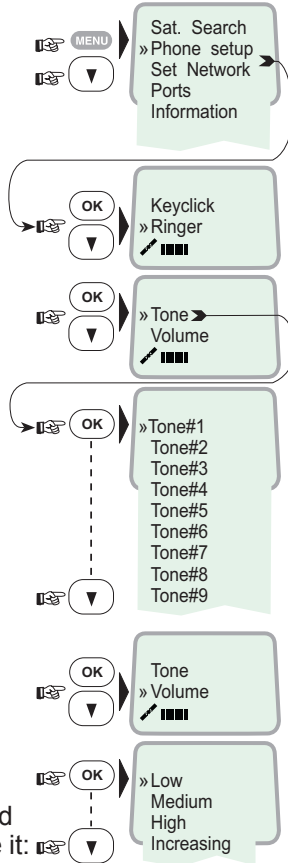

**Answer beep**

Nera F33 may be set to emit a signal in the handset when an outgoing call is answered. The signal will also sound when a call is transferred at the remote end.

The signal is not active during handsfree calls.

*The answer beep can be turned on/off as follows:*


**1** Open the **MENU**: scroll down to **Phone setup**, and

select the **Active MSN** function:

**2** Scroll down to the **Answer beep** function:

**3** Press **OK** and scroll to On or Off, as required:

**4** Pressing **OK** stores the chosen mode.

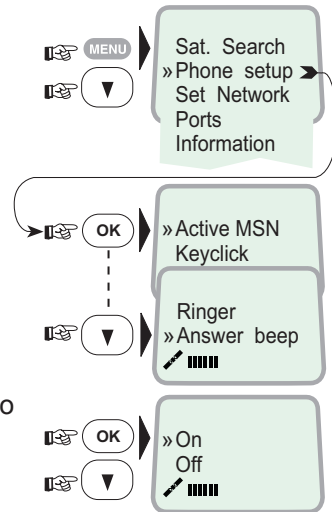






## Backlight On/Off

The display and keypad backlight can be set to:

- **On**, permanently ON
- **Off**, permanently OFF
- **30 seconds ON** when pressing a key or receiving a call, and stays ON 30 secs after last event.
- **Dimmer**, intensity adjustable in 10 steps.


*Changing the setting:*

**1** Open the **MENU**:  
scroll down to **Phone setup**,

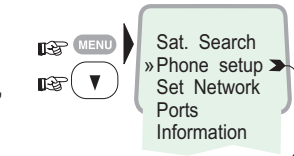


and


scroll down to the **Backlight** function:

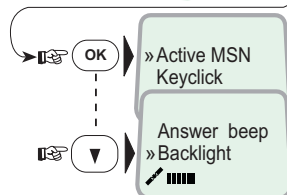

**3** Press **OK** and scroll down to required setting:

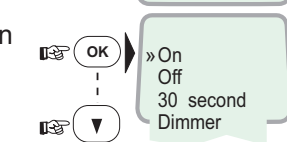

**4** Pressing **OK** at **Dimmer** opens the backlight adjustment window:

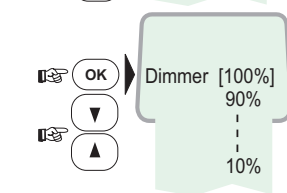

Adjust with up/down arrows:

**5** Press **OK** to store.


## Protocol

Nera F33 allows selection between the following ISDN protocols:

- **Euro ISDN** for connection to equipment conforming to the European ISDN standard (default)
- **NI-1** protocol for equipment conforming to the NI-1 standard (National ISDN-1).
- All ISDN devices and MCU must use the same protocol.


*The check for current protocol:*

**1** Open the **MENU**:  
scroll down to **Phone setup**,

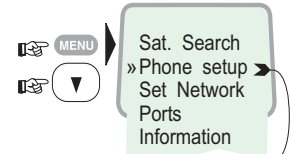


and

select the **Protocol** function:

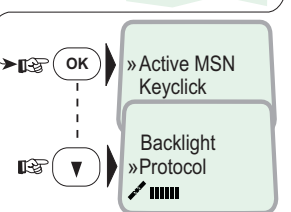

**2** Press **OK** and scroll required protocol:

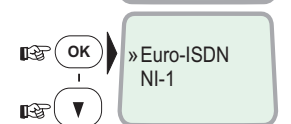


**3** Pressing **OK** stores the chosen ISDN protocol.

*To change the default setting in the MCU, see [User Guide > ISDN protocol configuration](#) on the CD.*

## Software version


This function displays the Nera ISDN Handset software version:

**1** Open the **MENU**:  
scroll down to **Phone setup**,

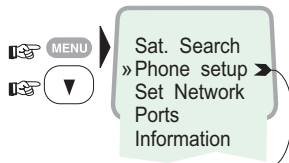

and

select the **SW version** function:

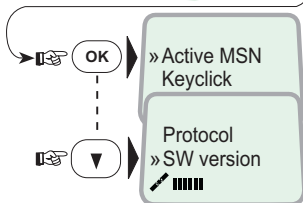

**3** Press **OK** to read:



To read other software versions, see [Information available](#) later in the manual.


## Selecting default Net service provider

The default Net service provider for a satellite (Ocean Region) is automatically used when dialing ship-to-shore.

*When using SIM card, selection of a default Net service provider is restricted to the one stored on the SIM card!*


Changing default Net service provider:

**1** Open the **MENU**:

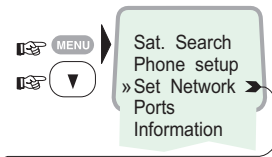

Scroll down to **Set Network**:

**2** Scroll down to the required Net service provider:

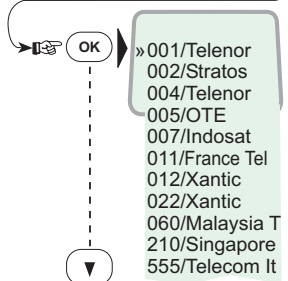

**3** Store the new Net service provider for the current Ocean Region:



To preprogramme Net provider for all Ocean Regions, vt-Lite Marine must be used, see [User Guide](#) on CD.




## Setting ports

### Serial ports A and B


The data speed, format and flow control for the **RS-232** serial ports **A** and **B** are set up as follows:

**1** Open the **MENU** and scroll down to **Ports**:

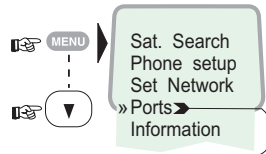


See **Overview** for available choices.


**2** Select the parameter to be set for Port A:

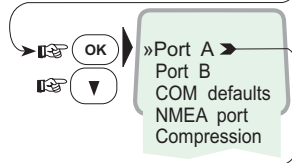



**3** Select the listed data **Speed** 115200 bps (default):



**4** Select listed **format**: 8 data bits, no parity and 1 stop bit (default)

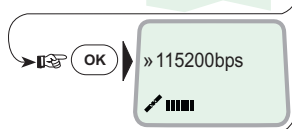

**5** Set flow control to **rts/cts** (default):




### Port B driver switch

Select data speed, format and flow control as described for serial port A.


Switching the driver from **RS-232B** to **RS-422**:

**6** Select **Serial Ports**:

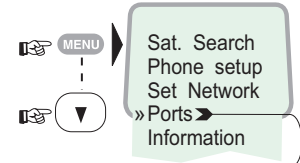

and


scroll down to **Port B**:

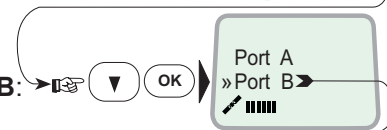


**7** Open the **Driver switch** function:

and

scroll down to **RS-422**:

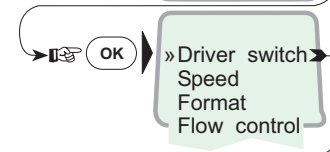

The **RS-422** terminal block is now activated for connection of e.g. PC using cables of up to 100 m.  
The **RS-232** serial port **B** is disconnected.

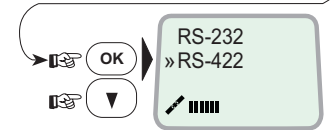


For information on **NMEA port**, see [NMEA-0183 input sources](#) later in this manual.  
For information on **Compression**, see [Applications > Data Compression](#) on the CD.

### Information available

Open the menu and scroll down to read various information, as indicated (examples):

### Alarm

The alarm indicator flashes when an alarm condition occurs:




Alarm indicator

The indicator stops once the alarm has been read in the Display Handset by pressing

**MENU > Information > Alarms & messages.**

The indicator continues to be displayed if the alarm condition persists.

The red alarm indicator on the MCU (see next page) flashes in step with the alarm indicator in the display.

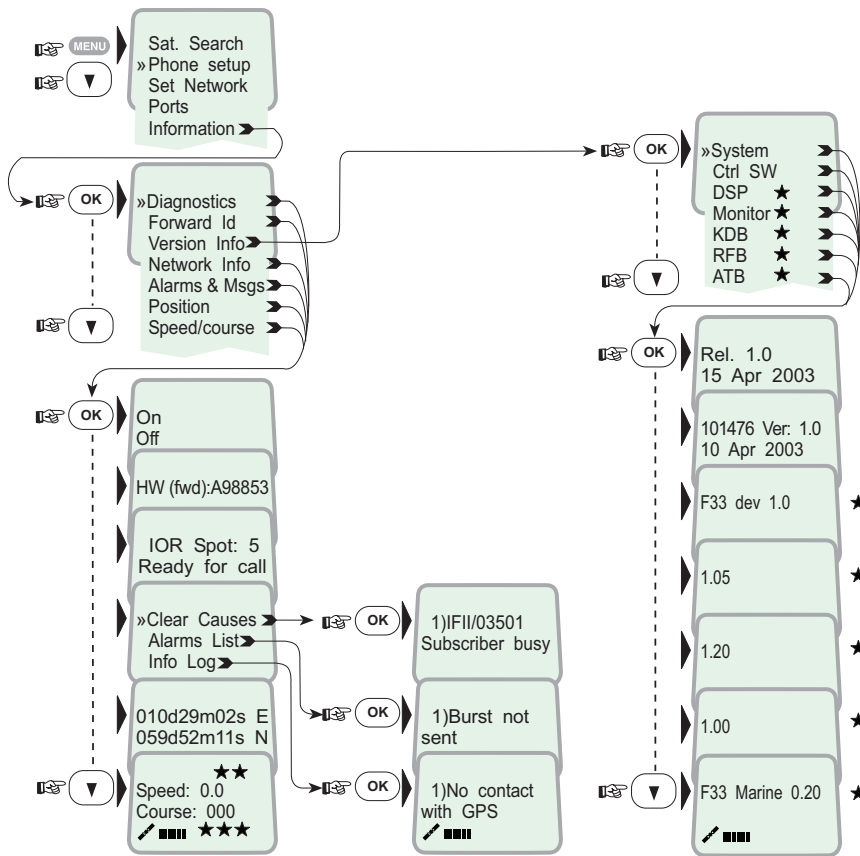

★★ Speed  
 ★★★ Course over ground  
 Note! Not to be used for navigation

★ Only appears with Diagnostics ON



## General

Nera F33 provides access to Group 3 telefax service via Terminal Adapter. The transmission rate is 9.6 kbps.

## Limitations

Nera F33 is fully compatible with the world's leading telefax machines and telefax software standards. However, transmission may not be possible through some of the telefax machines available on the market. Please check with your Net service provider/ Nera Distributor before purchasing a telefax for use with Nera F33.

## Installation

For installation details, see [Appendix B – Connecting up Nera TA](#), or [Connecting up BCS iTA](#).

## Transmission


Telefax calls made by Nera F33 are telefax only. Any telephone handset connected to the telefax machine can not be used.

To send a fax, use the same dialing sequence as when making a call. See [Various call procedures earlier in this manual](#).

*Note! On a telefax with keypad, enter  as the last digit before starting transmission.*

Telefax transmissions normally take 1 minute per

standard text page using standard resolution. Using superfine or halftone resolution will double the transmission time. To save time, avoid using a separate cover page. If a call failure should occur while sending a multi-page document, re-send only the failed pages.

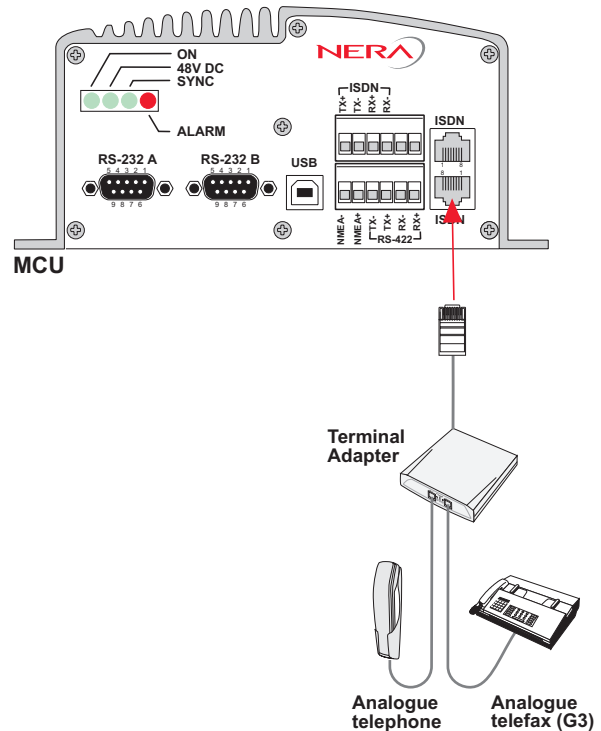



**9.6 kbps data transmission**

Nera F33 provides access to asynchronous data services through its built-in modem capability. The transmission rate over the satellite is 9.6 kbps, and any standard PC with a serial port can be used.

**Installation**

Connect the RS-232 serial cable between the serial port on the PC and one of the the 9-pin **RS-232** ports on the Nera F33 MCU.

For connecting up and configuration, see [Applications > Mobile Data Service via RS232 or via USB](#) on the CD.

**Compressed data transmission**


Built-in V42 bis / 44 compression provides up to 4 x 9.6 kbps increase in transfer speed between Nera F33 and shore of:

- text files
- web browsing
- e-mail

This mode takes affect when the remote end is prepared for communication using the V42bis/44 modem protocol.

Nera F33 will compress data if possible. No setup is needed.

For more information, see [Applications > Data Compression](#) on the CD.

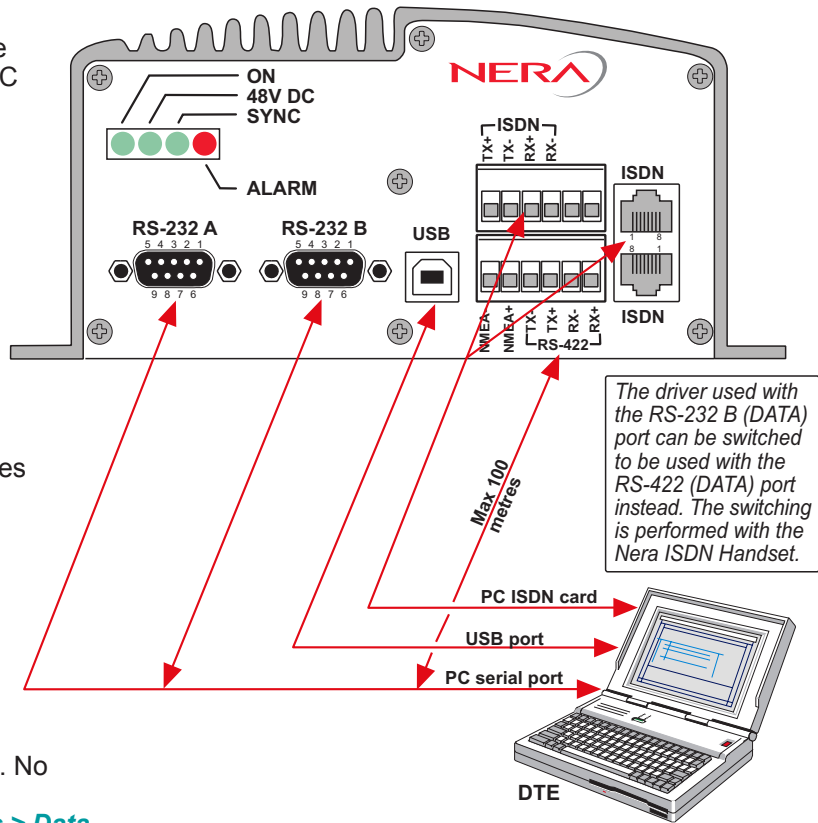



## Installing the PC program

The **vtLite Marine** program allows Nera F33 to be operated or configured from a PC, including functions such as:

- Phone book
- Traffic log
- Configuration of ports (ISDN/USB/RS-232/RS422)
- Configuration of the MCU


Connect the PC as indicated on the previous page.

The **vtLite Marine** program is available on the enclosed CD and must be installed on the PC hard disk.

For an explanation of the functions, see the [User Guide](#) on the CD.

Close any Acrobat Reader program open on the PC before proceeding.

See next page.

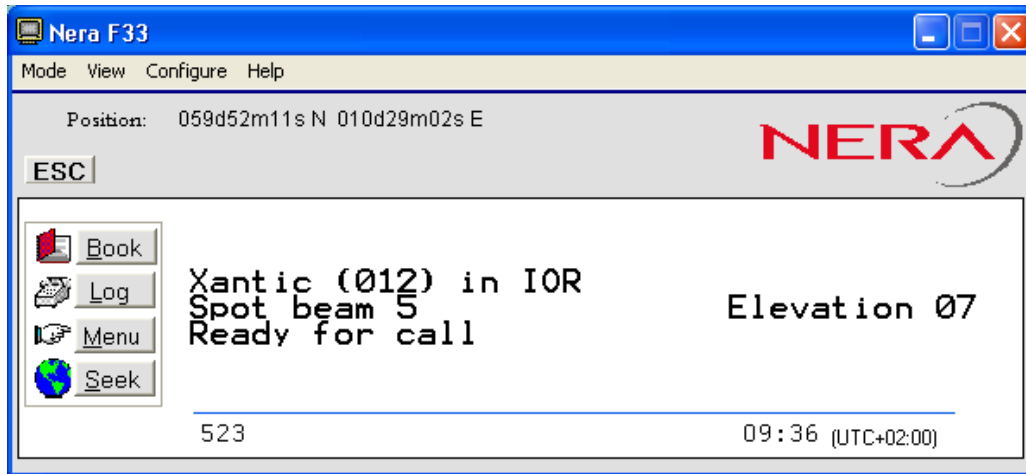

*Nera vtLite Marine PC program*



Procedure:

**1** Insert the CD :

The Start Page opens automatically in a few seconds. (Alternatively, open the Acrobat file “Nera F33\_StartPage” on the CD. If necessary, install Acrobat Reader by clicking “Ar505enu.exe” in the “SW Installation” folder.)



**2** Click “Software Installation” and then “vtLite Marine”. Allow files to load on to the PC hard disk. The installation of the program starts automatically when files have been loaded.

**3** Connect the serial cable between the PC serial port and one of the RS-232 ports on the Nera F33 Main Communication Unit. See [DATA SERVICE](#).

**4** Switch ON the Main Communication Unit.

**5** Start the vtLite Marine program by clicking **Start>Programs>vtLite Marine**.  
If no contact, click **Mode>Terminal MMI**.

**6** Click **Configure > Port** to check the port settings.

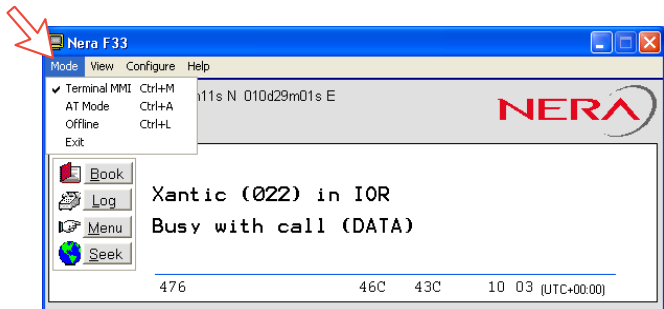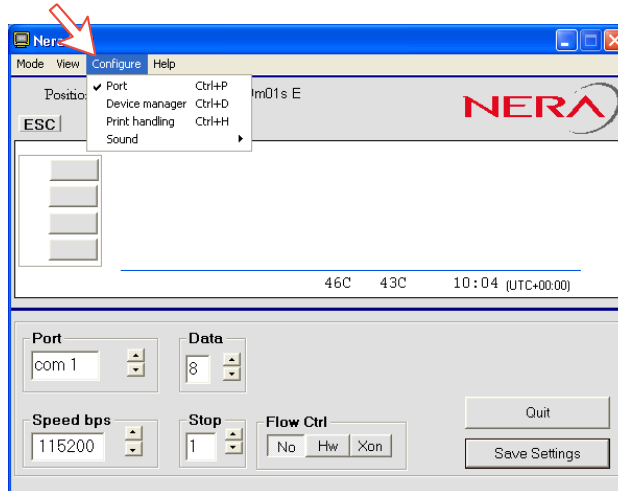





## ***General***

No regular maintenance is required of the Nera F33 satellite terminal.

It is recommended, however, to clean the antenna radome every once in a while.

The realtime clock is automatically updated by the built-in GPS.



<b>Problem</b>	<b>Probable cause</b>	<b>Action</b>
<b>1. The Nera F33 MCU power ON indicator does not light up:</b>	The Main Communication Unit is not switched ON Power is not connected	<ul style="list-style-type: none"> <li>• Set the ON/OFF switch to ON (rear panel).</li> <li>• Switch OFF, wait 10 secs and switch back ON</li> </ul> <hr/> <ul style="list-style-type: none"> <li>• Check that the power cord is properly connected to 24VDC power source. <i>Diode info: ON=DC-in OK (&gt;18VDC), 48VDC=Internal DC Power output 48V OK</i></li> </ul>
<b>2. The Nera ISDN Handset display freezes or stays completely blank:</b>	The handset cord is not connected or damaged	<ul style="list-style-type: none"> <li>• Check that the handset cord is properly connected and inspect the cord.</li> <li>• Power MCU off/on</li> <li>• Disconnect cord from MCU and connect it again.</li> </ul>
<b>3. Nera F33 cannot find the satellite:</b>	No or weak signals. Sight to satellite obstructed	<ul style="list-style-type: none"> <li>• Check that no obstacles block the free sight to the satellite.</li> </ul>
<b>4. Low signal reception:</b>	Obstructions	<ul style="list-style-type: none"> <li>• The signal strength indicator should preferably exceed 500 in vtLite Marine, or 4bars in the Handset display.</li> <li>• Check that no obstacles block the free sight to the satellite.</li> <li>• Restart the search for any satellite, or try a satellite in a specific Ocean Region.</li> </ul>
<b>5. Nera F33 functions abnormally:</b>		<ul style="list-style-type: none"> <li>• Turn off power and disconnect power, and switch on again.</li> <li>• Verify correct voltages to the MCU: 24V DC -10% to +30%.</li> <li>• Download new software from the Nera website. (preferably done by a Nera Regional Service Centre)</li> </ul>



<b>Problem</b>	<b>Probable cause</b>	<b>Action</b>
<b>6. Unsuccessful call:</b>	Nera F33 is not commissioned.	<ul style="list-style-type: none"> <li>• Check clear cause</li> <li>• Call the Net Service Provider.</li> </ul>
	The following messages appear in the vtLite display: "No response from net". (HS: Disconnected)	<ul style="list-style-type: none"> <li>• Check that the correct Net service provider is shown in the display.</li> <li>• The Nera F33 terminal is not commissioned.</li> <li>• Verify in Nera ISDN Handset menu &gt;Information&gt;Network info&gt;(scroll down) successful=commissioned, failed=not commissioned.</li> </ul>
	The called party is busy. "Subscriber busy" appears in HS display	<ul style="list-style-type: none"> <li>• Wait for some time and try again.</li> <li>• Call another subscriber.</li> </ul>
<b>7. Problems with telefax:</b>	Incomplete dialing	<ul style="list-style-type: none"> <li>• Remember to press "#" as last digit before starting transmission.</li> <li>• Instead of "#", try to enter: 902 + 00 + country code + subscriber number.</li> </ul>
	Fax fails to work in Global Beam (0)	<ul style="list-style-type: none"> <li>• Works in spot beam only.</li> </ul>
	Service not commissioned	<ul style="list-style-type: none"> <li>• See problem 5.</li> </ul>
	System transmission delays	<ul style="list-style-type: none"> <li>• The OFF-HOOK time for handshake should be as long as possible (e.g. 2 minutes). When the fax machine is called, ringing time should be set to minimum (e.g. immediate answer).</li> <li>• Set error correction to OFF</li> <li>• Try a different fax machine. Check that the telefax (Group3) is properly connected to the Nera Terminal Adapter.</li> <li>• Contact the Distributor</li> </ul>



<b>Problem</b>	<b>Probable cause</b>	<b>Action</b>
<b>8. No GPS:</b> <i>"Beam selection failed"</i> <i>"Not ready for call"</i>	GPS alarm, or GPS not received	<ul style="list-style-type: none"> <li>• Wait up to 15 minutes. The GPS may use up 15 minutes if Nera F33 has switched off for more than 6 hours. If not the case, GPS will report position to vtLite Marine and handset display when GPS sync. GPS is needed to select satellite beam!</li> </ul>
<b>9. Problems with data communication:</b>	Wrong PC settings	<ul style="list-style-type: none"> <li>• <b>Check the PC program settings:</b> speed 115200bps, 8 data bits, 1 stop bit, no parity if RS232 is used (default settings in F33 MCU).</li> <li>• Shore/land has not an analogue modem.</li> <li>• <i>Read Nera Application guide on F33 CD.</i></li> <li>• Contact the PC applications vendor for help.</li> </ul>
	Data Service fails in Global Beam (0)	<ul style="list-style-type: none"> <li>• Works in spot beam only.</li> </ul>
<b>10. Routing of calls:</b>	MSN number not entered properly	<ul style="list-style-type: none"> <li>• Make sure that the MSN number entered into Nera F33 with the Device Manager, is also entered into connected equipment. Some devices, e.g. Nera ISDN Handset, can be programmed with multiple MSNs.</li> <li>• Call Handset to verify MSN of other phones.</li> <li>• Read Handset MSN by pressing "R"-button.</li> </ul>
<b>11. Problem with local calls:</b>	Wrong dialing	<ul style="list-style-type: none"> <li>• Check that you call the correct MSN number. If Access Code is used, you need to enter this code first.</li> <li>•   MSN </li> </ul>
<b>12. Problem with call transfer</b>		<ul style="list-style-type: none"> <li>• Phone does not support "R"-button.</li> <li>• Not possible to transfer call from analogue to ISDN.</li> </ul>



**AC** Alternating Current

**AOR-E** Atlantic Ocean Region East.

**AOR-W** Atlantic Ocean Region West.

**Azimuth** horizontal direction angle between north and, e.g. the direction to the satellite.

**Bit rate** the number of bits transmitted per second (bps).

**Byte** = 8 bits

**CHV2** higher access level on the SIM card, corresponding to Nera F33 "owner" level.

**DC** Direct Current.

**DID** Destination terminal IDentification.

**DSP** Digital Signal Processor.

**DTE** Data Terminal Equipment.

**Elevation** vertical angle to the satellite, i.e. the height of the satellite above the horizon.

**Fleet 33** Inmarsat's single integrated voice, fax, Mobile Data Service and Mobile Packet Data Service.

**FWD ID** forward Id, telephone network identity.

**GAN** Inmarsat Global Area Network.

**Home LES** Home Land Earth Station gives access to MPDS service like Internet / e-mail and handles MPDS billing system.

**IMN** Inmarsat Mobile Number, a unique 9-digit number which identifies each device connected to Nera F33.

**Inmarsat** International Maritime Satellite Organisation.

**IOR** Indian Ocean Region.

**ISDN** [Integrated Services Digital Network](#).

**ISN** Inmarsat Serial Number, individual number assigned to each Nera F33 terminal.

**ITU** International Telecommunications Union

**Kbps** Kilobits per second.

**LAN** Local Area Network.

**LES** Land Earth Station, a station that interconnects fixed telecommunications networks with the Inmarsat system; may also be called a CES (Coast Earth Station) or a GES (Ground Earth Station).

**M4** Inmarsat Multi-Media Mini-M.

**MES** Mobile Earth Station, a user terminal for an Inmarsat

system; the Nera F33 terminal is an MES for the Inmarsat GAN system; MES may also be called SES (Ship Earth Station) or, if on aircraft, AES (Aeronautical Earth Station).

**MPDS** Inmarsat Mobile Packet Data Service.

**MSN** Multiple Subscriber Number, the extension number that connected equipment responds to. Also used for internal calls.

**NCS** Network Coordination Station, station that supervises all messages and signals sent in the Inmarsat system; one in each Ocean Region.

**OID** Originating terminal IDentification.

**Ocean Region** the coverage area of an Inmarsat satellite within which Nera F33 may communicate.

**PABX** Private Automatic Branch Exchange.

**PIN** Personal Identification Number.

**POR** Pacific Ocean Region.

**PPP** Point-to-Point Protocol, protocol used for serial data communication via the Nera F33 RS-232 or USB port.

**PUK** Personal Unblocking Key, code that allows unblocking a SIM card.

**RF** Radio Frequency.

**R LES** Regional Land Earth Station sets terminal in MPDS list.

**S/A operator** StandAlone operator who maintains connectivity in the event of Network Coordinating Station failure.

**SBS** Shared Base Station assigns channels to the MPDS user and handles the MPDS communication.

**SIM** Subscriber Identity Module.

**SMS** Short Message System.

**Spot Beam** an Ocean Region is divided into sub-regions, each "spotlighted" by a beam from the region satellite.

**Terminal ID (OID/DID)** different IDs for different Inmarsat services (e.g. 01 = 4.8 speech)

**Terrestrial Network** a fixed telecommunications network, such as a telephone network or a data network, which connects to the Inmarsat system at an LES/NCS.

**UDI** Unrestricted Digital Information.

**USB** [Universal Serial Bus](#).

**UTC** Coordinated Universal Time, referenced to Greenwich





## Safety Warnings, Cautions and Warranty

### General

To avoid interference, do not run cables parallel to AC wiring, or near fluorescent lights or other high magnetic or electrical fields. Interference from this kind of sources causing equipment to be faulty or fail working properly will automatically void warranty conditions. Access to the interior of the equipment shall be made by a Nera qualified technician only.

*The equipment should preferably be installed by a Nera SatCom approved Installation & Service Agent.*

Warranty is not valid until the "Nera SatCom AS Warranty Certificate" (at the back of the Registration and Warranty Certificate booklet enclosed with the equipment) is signed by the approved Installation & Service Agent, and returned to Nera SatCom.

### Grounding

Connection to all type of equipment meant for operation together with Nera F33 should be done while the unit is powered off. Peripheral equipment using mains shall be connected to a grounded AC power socket.

### Cables and connections

Cables longer than 5 metres must be shielded. All peripheral equipment must be grounded.

- ISDN telephone	100 m	0.22 mm <sup>2</sup> min
- Analogue telephone	150 m	0.22 mm <sup>2</sup> min
- USB	5 m	Standard cable
- RS-232	3 m	Standard cable
- RS-422	100 m	0.22 mm <sup>2</sup> min

*Always follow the installation guidelines described later in this manual for each type of interface.*

### Ventilation of the Main Communication Unit

*Ambient temperature range: 0 - 45°C.*

*To ensure adequate cooling of the MCU a 10 cm unobstructed space must be maintained above and below the unit.*

*See "Placing the Main Communication Unit (MCU)".*

***Failure to comply with the above rules for installation will automatically void the warranty.***



## Location of Antenna Unit

### Avoiding obstructions

The antenna has a beamwidth of  $\pm 5^\circ$  at 3 dB and ideally requires a free line of sight in all directions. Any obstruction will cause blind sectors, resulting in signal degradation or even loss of communication with the satellite.

Degradation of the satellite signal can only be completely avoided by placing the antenna higher than any obstructions. This is often not feasible and a compromise must be made to reduce the number of blind sectors and cost of installation.

The degree of signal degradation depends on the size of the obstructions; the distance to them must therefore be considered.


Preferably, all obstructions within 3 m of the antenna should be avoided. Obstructions less than 15 cm in diameter can be ignored beyond this distance.

### Radiation precautions

Personnel should not be admitted in areas closer than 2 m from the antenna.

However, no restrictions are required when the antenna radome is installed at

**MICROWAVE RADIATION !  
NO ADMITTANCE WITHIN 2M**

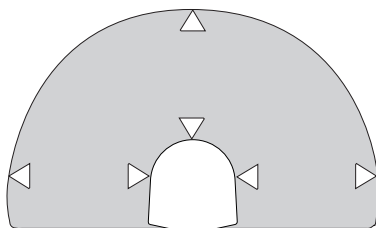

least 2 m above the highest point accessible to passengers.

### Avoiding interference

Do not locate the Antenna Unit close to interfering signal sources, or in such a position that the source (e.g. radar antenna) radiates directly into the Nera F33 antenna.

The Antenna Unit should be separated as far as possible from other transmitter/receiver antennas, and preferably by at least 5 m from the antenna of other communication or navigation equipment, such as the antenna of the satellite navigator, the VHF antenna, radar equipment, or other Inmarsat equipment.

### Compass safe distance

For installation on British or Norwegian vessels, the antenna should be located at a distance of at least 1.0 metres from the magnetic steering compass. Be aware that requirements may vary from one country to another.

### Other precautions

Do not place the antenna close to the funnel, as smoke deposits will then eventually degrade antenna performance.

*The antenna should be installed so that severe vibration and shock are avoided.*





## Coax cable

A 25 metre coaxial cable type RG-223 (103154) is supplied as standard.

For greater lengths, see the table below which lists suitable double screened coax cables.

The coax cable should be secured by laying the cable in a tube and/or by fastening the cable to avoid damage.

## Optional antenna cable

Double screened 50 ohm coaxial cable must be used for connection between the MCU and Antenna Unit.

A "pigtail" is required in each end for the RF 1/2" 50 type cable.

The maximum length of the coax cable is limited by the DC and RF loss through the cable:

**Maximum DC loss:** R loop 4.0 ohms

**Maximum RF attenuation at 1.6 GHz:** < 20 dB

## Power source

The equipment operates from 20 to 32 Volts DC.

Maximum power consumption:


- transmit mode: 110 W

- receive mode (idle): 40 W

\* Halogen-free/flame retardent/low smoke (FRNC: Flame Retardent Non-Corrosive)


Antenna cable	Nera part no.	Diameter	Bending radius	Max. length for 20dB	Suitable coaxial connectors
RG223	R906551/1	5.3 mm	53 mm	25 m	11N-50-3-54
RG214-FRNC*	105052	10.8 mm	108 mm	50 m	11N-50-7-5
S 10172 B-11	QTZC502012	12.9 mm	129 mm	140 m	11N-50-10-4
RF 1/2" 50		16.0 mm	160 mm	170 m	11N-50-12-10 + "pigtail"

Mounting the coaxial connector, see later in this appendix

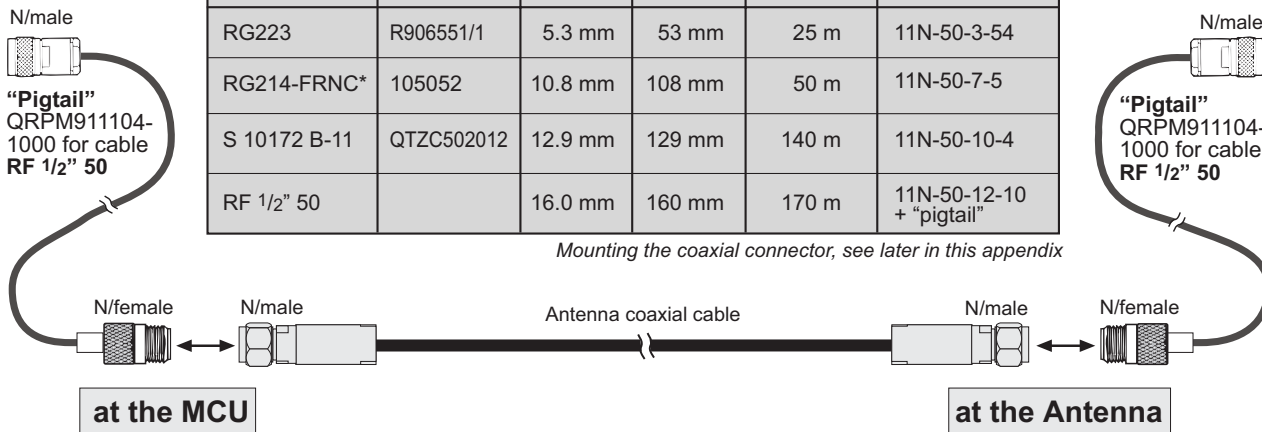





# Connecting up

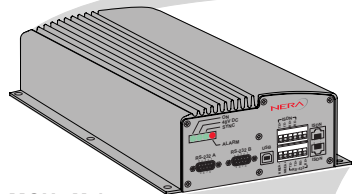

MCU - Main Communication Unit

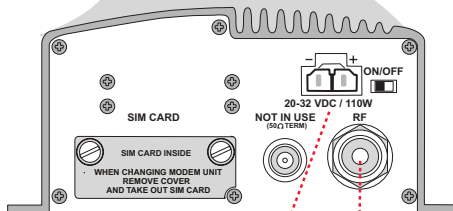



Rear connector panel

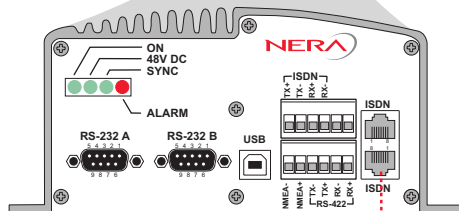

Front connector panel



Antenna Unit

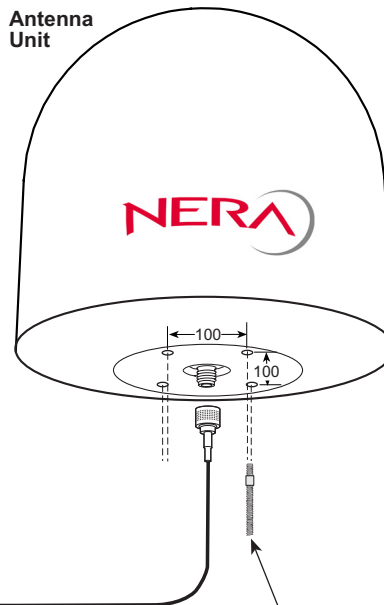



Ship's 20-32 VDC

Use the enclosed special studs (4) for mounting of the antenna radome. See also next page.






### Outline dimensions

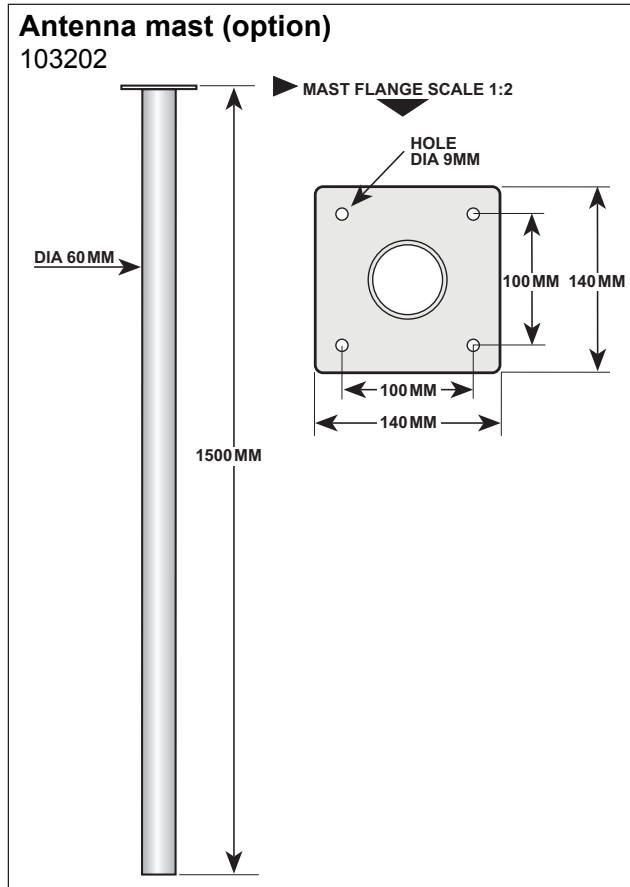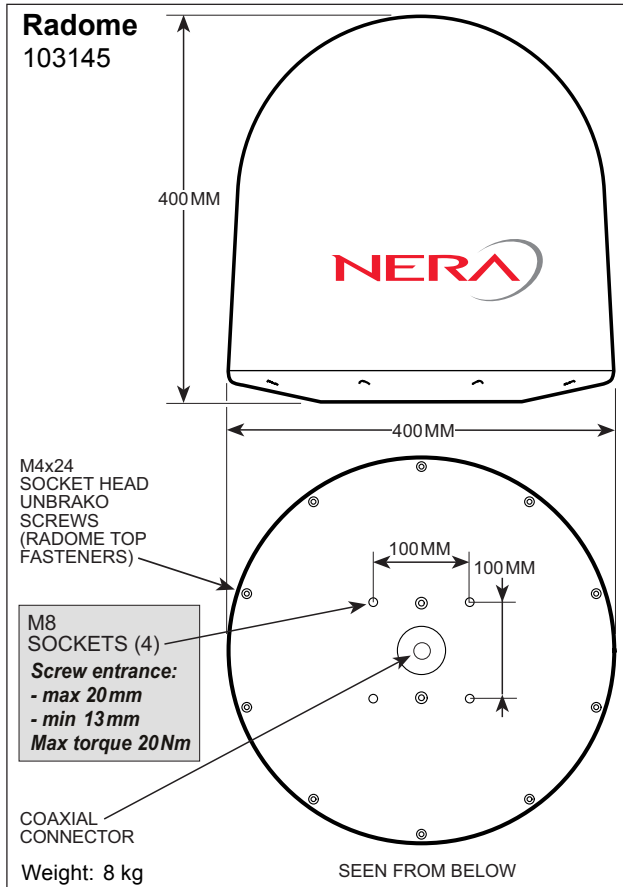



### Main Communication Unit (MCU)


102309

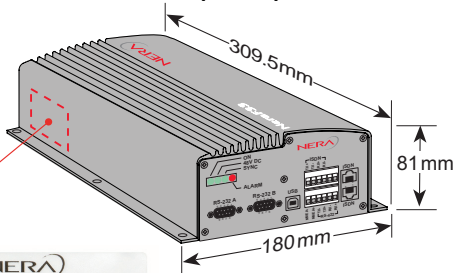

Example of serial no/ISN label:

Unit designation → Nera F33  
 Nera Part No. → Main Communications Unit  
 Revision no. → 102309 1 G  
 ISN - Inmarsat Serial No. → 66EB3028D6A0  
 Production Serial No., e.g.: 01 - 03040003  
 year month ser.no in month


**Important!**  
 Ensure free space of at least 10 cm around the MCU for adequate cooling, and to allow removal of the unit for service.

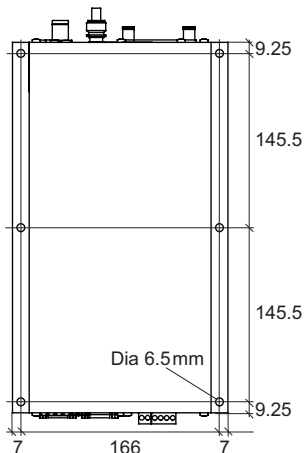

Weight: 3 kg

### Nera ISDN Handset


101654

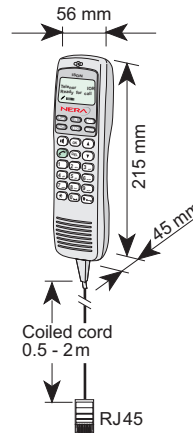

Weight: 0.3 kg

### Handset holder/cradle


QSXA911394

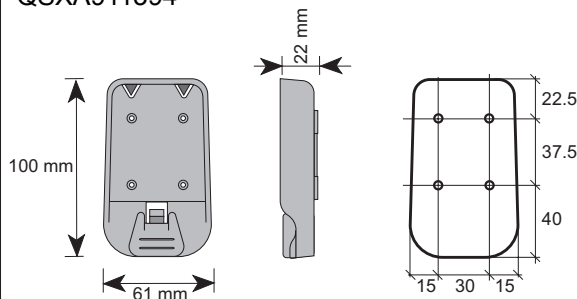


Weight: 0.06 kg



**ISDN wall socket  
(option)**  
102176

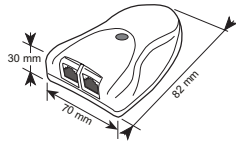


**Nera Terminal Adapter  
Analogue-to-ISDN TA with 2 analogue lines  
(option)**  
QDGY911914:

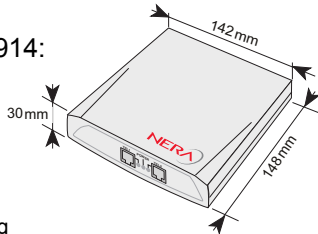


Weight: 0.1 kg

**BCS iTA Terminal Adapter  
Analogue-to-ISDN TA with 2 analogue lines  
(option)**  
QDGY911912:

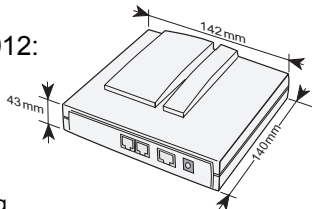


Weight: 0.2 kg

### Mounting handset holder/cradle

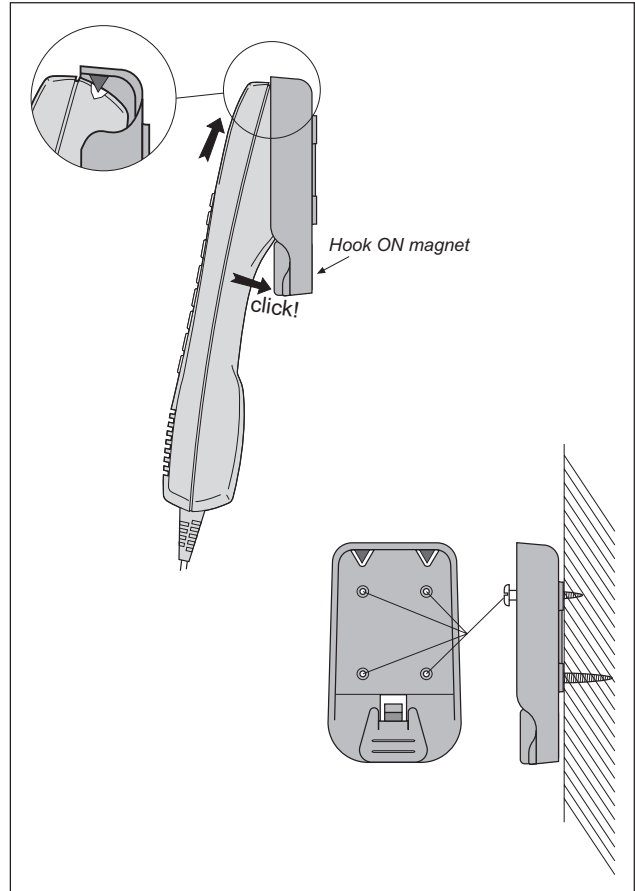


## MCU connectors

Rear connector panel

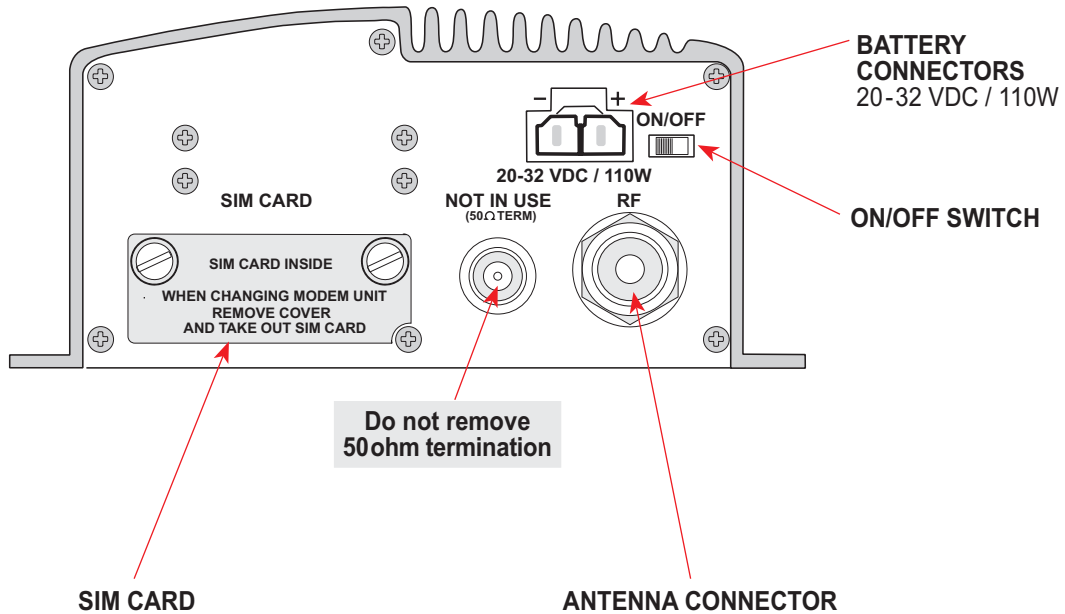




## Front connector panel

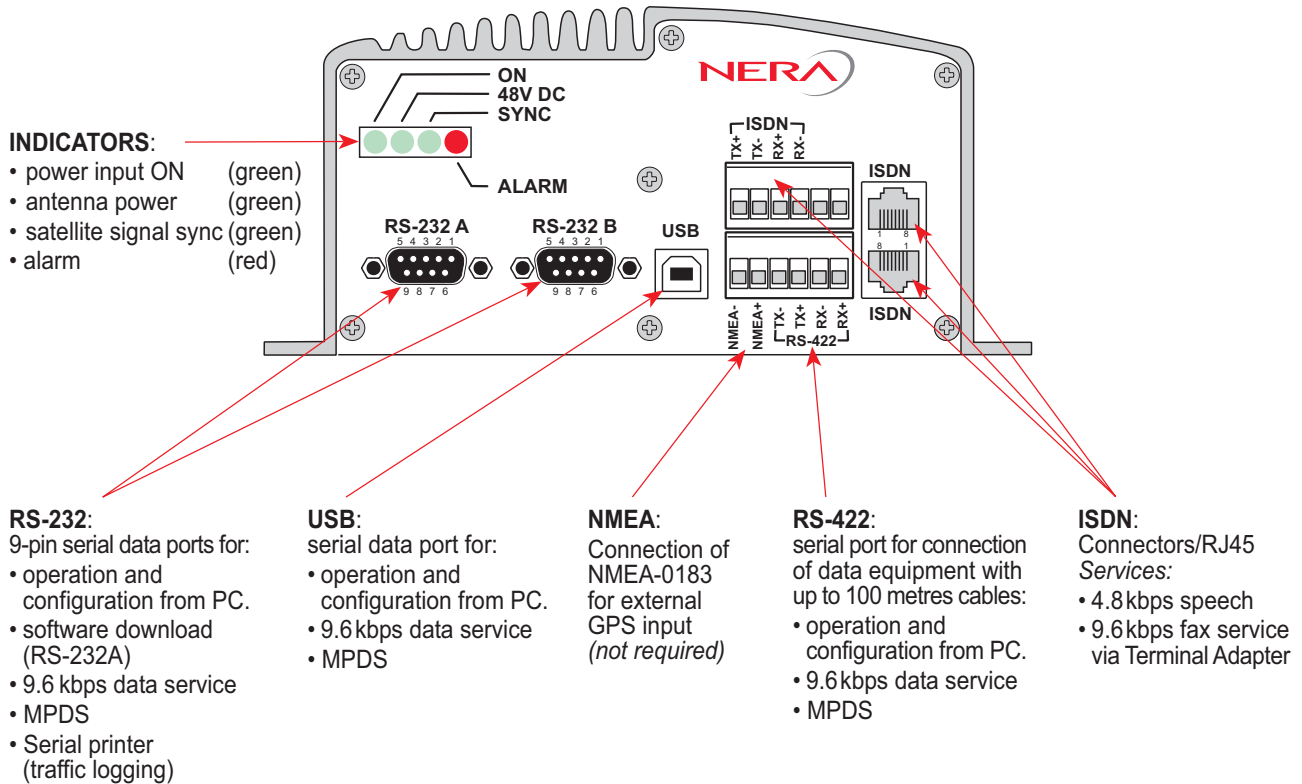


## Connecting up - examples

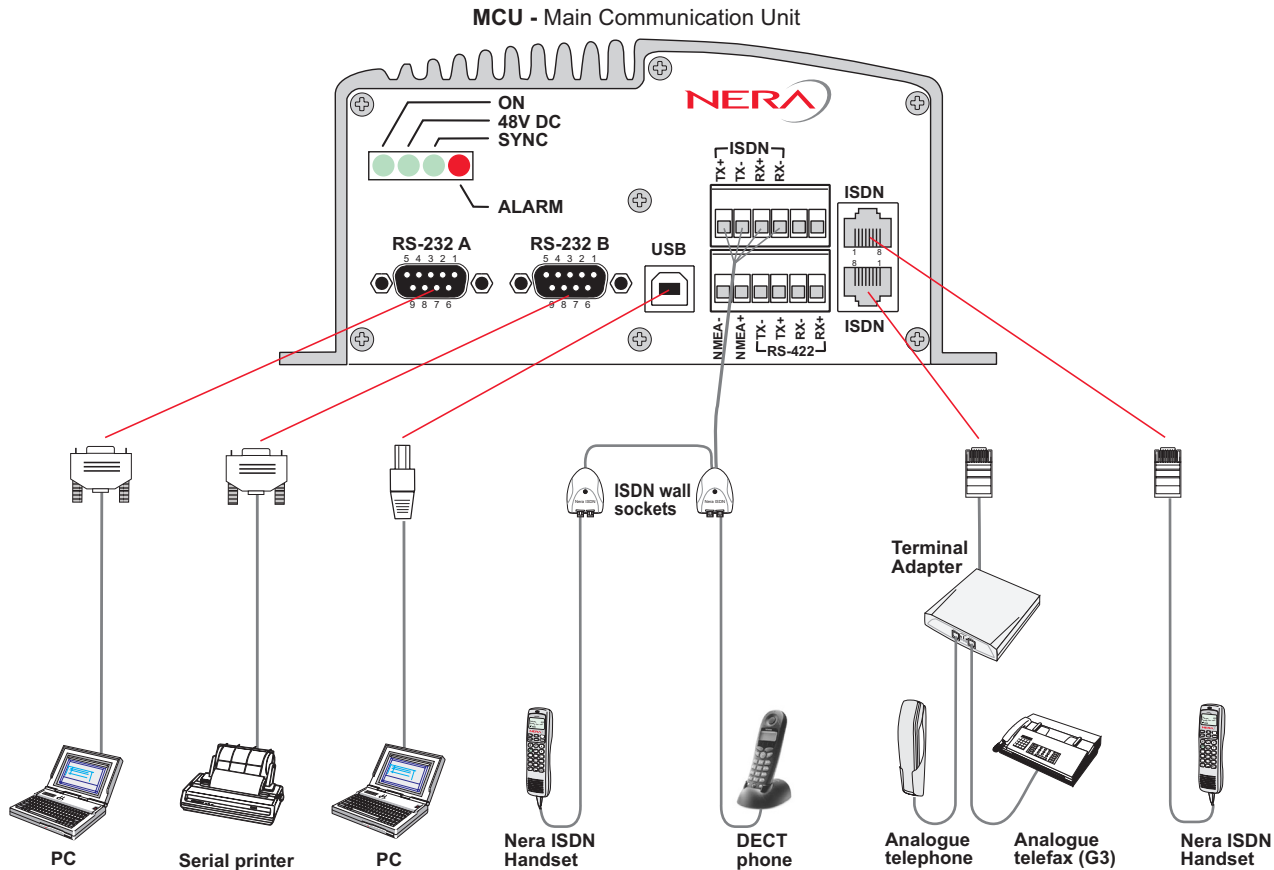






# ISDN telephones/equipment

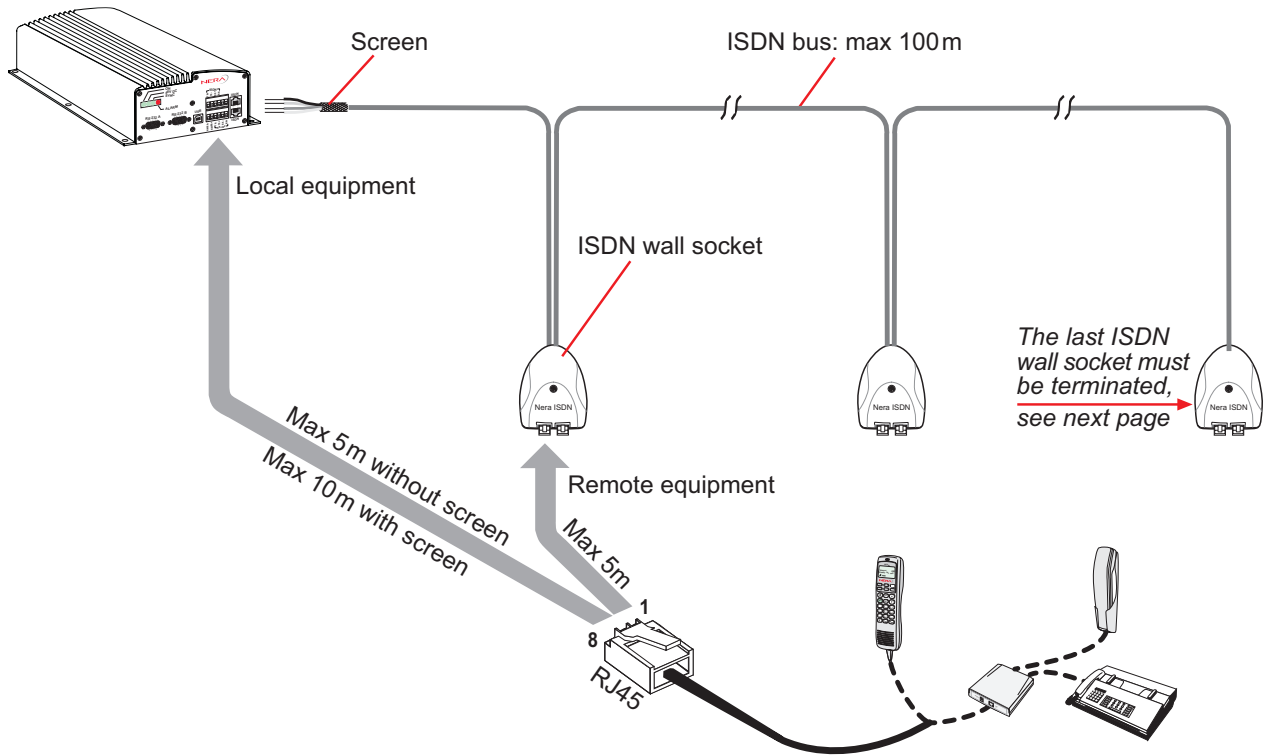



Nera ISDN Handset, or analogue telephone and telefax (Gr.3) via TA

## ISDN cable lengths

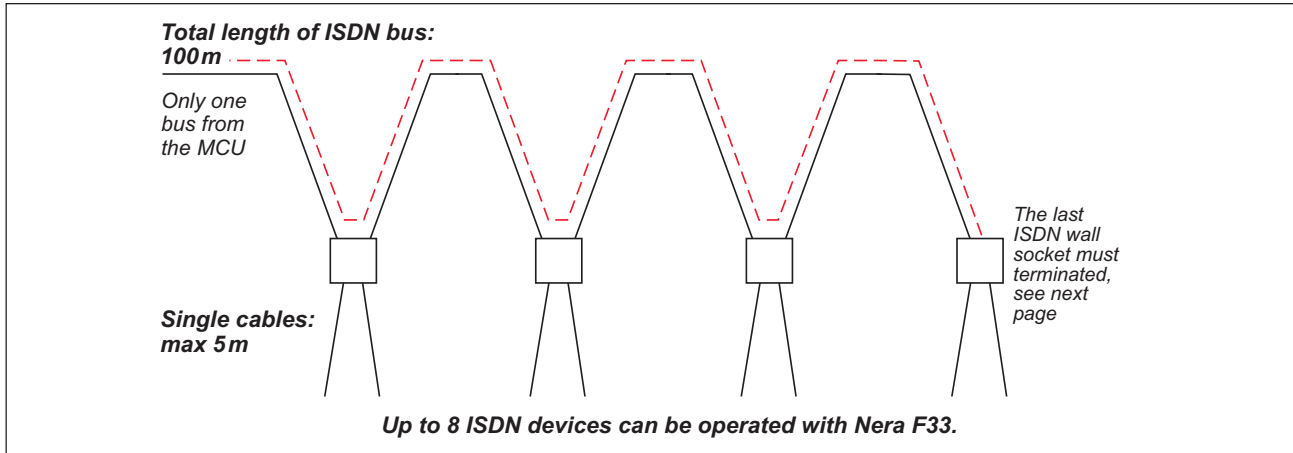


## ISDN bus termination

When longer than 10 metres, the end of the ISDN bus must be terminated by two resistors as shown below. Only one bus/termination per MCU.  
*Be aware that only one ISDN cable is permitted to be longer than 10 metres.*

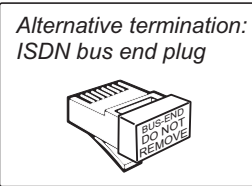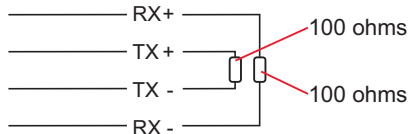



### ISDN connectors

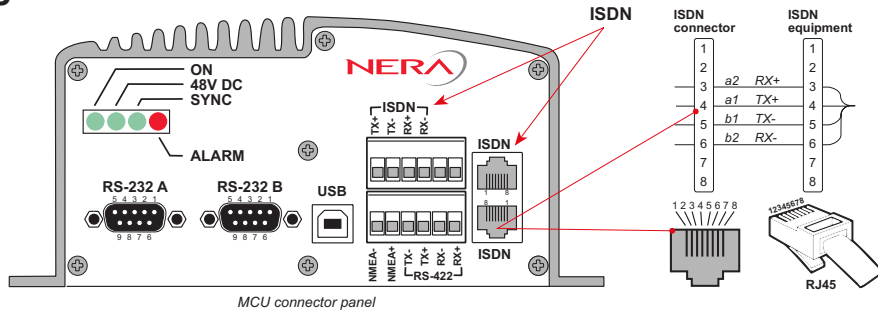

### ISDN wall socket

ISDN bus from the MCU To next ISDN wall socket via junction box, if required.

Ground to be continued or interconnected

ISDN wall socket

Terminal	Name	38VDC	Signal	ISDN port
4	a1	-	TX+	<input type="checkbox"/> TX+
5	b1	-	TX-	<input type="checkbox"/> TX-
3	a2	+	RX+	<input type="checkbox"/> RX+
6	b2	+	RX-	<input type="checkbox"/> RX-

When the distance between the MCU and the last connection box on an ISDN bus exceeds 10m, the termination resistors in the last box must be incorporated by setting both slide switches to position ON:

The switches in all other boxes should be OFF (default setting).


The two RJ45 jacks are connected in parallel.






## Cable pinouts


### ISDN cable

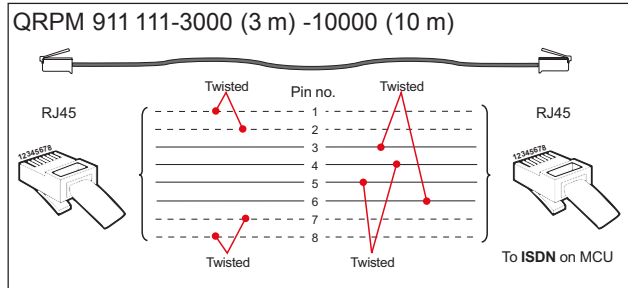


### Analogue telephone cable

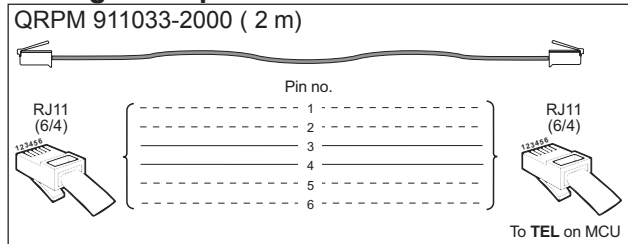


### USB cable

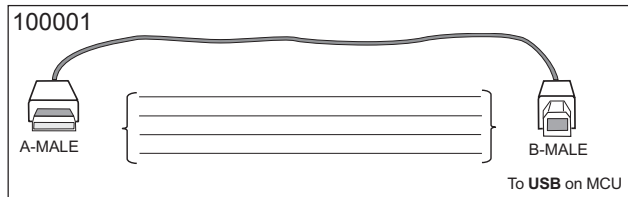


### 9-pin to 9-pin RS-232 cable (3 m)

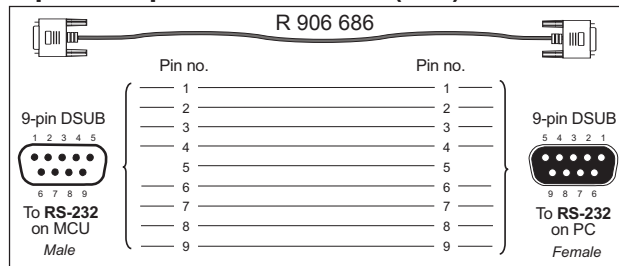

### RS-422 cable

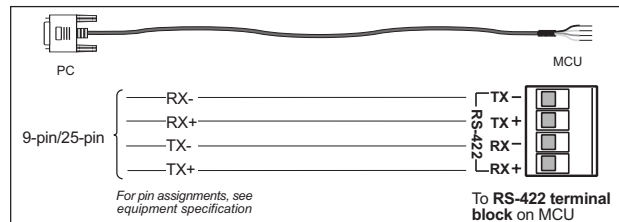

### 9-pin to 25-pin printer cable

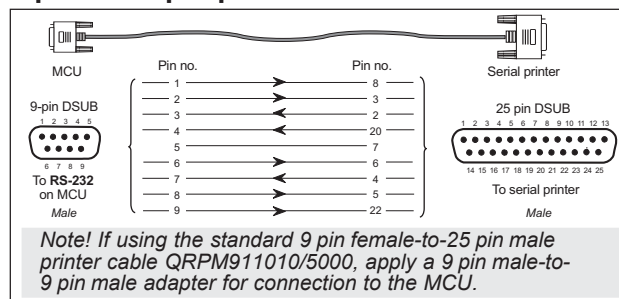




## Serial printer settings

### Switch bank 1


Switch no.	OFF	ON	FUNCTION
1	Even	Odd *	Parity
2	With	No *	Parity
3	7	8 *	Databits
4	X-on/X-off	Ready/Busy *	Protocol
5	Monitor	Circuit *	Test Select
6	Test	Print *	Mode Select
7		ON *	} Busy line RTS (-9V)pin4
8	Off *		

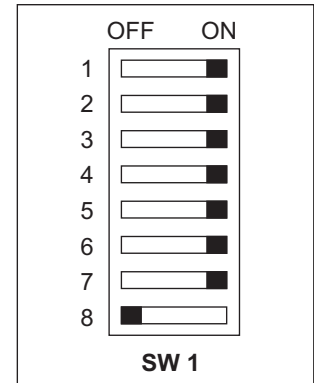

\* Correct setting

### Switch bank 2

Switch no.	OFF	ON	FUNCTION
1		ON *	} Baud rate 4.800
2	Off *		
3		ON *	
4	Invalid	Valid *	DSR I/P signal
5	512 Bytes	32 Bytes *	Buffer Threshold
6	1 sec.	200 ms *	Min. Busy Time
7	High when selected	High at Power on *	DTR Signal
8	*		Not Used

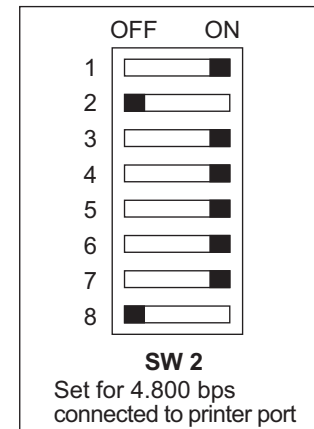



## NMEA-0183 input sources (complies with IEC 61162-1)

Intended for backup GPS. The internal GPS located in the antenna will always be used as the primary source. If the primary source is not receiving GPS signals, the external GPS input will be used (if enabled). NMEA-0183 input is not required for operation of Nera F33.

The NMEA-0183 (ver. 3.00) input is a 4 - 15 V current loop interface located on the connector panel of the MCU.

### Data input format:


Baud rate 4800

Data bits 8, parity none, stop bit 1

Heading input is not required




### Recognized GPS time, position and fix data format:

```
$--GGA,hhmmss.ss,llll.ll,a,yyyy.yy,a,x,x,xx,x.x,x.x,M,x.x,M,x.x,xxxx*hh<CR><LF>
```

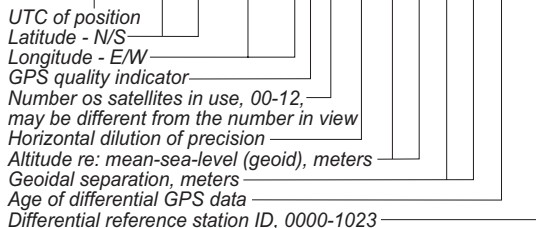

### Recognized NMEA-0183 data format:

```
$--RMC,hhmmss.ss,A,llll.ll,a,yyyy.yy,a,x,x,x,xxxxx,x.x,a,*hh<CR><LF>
```

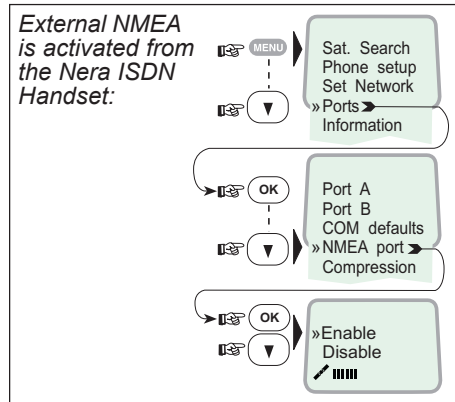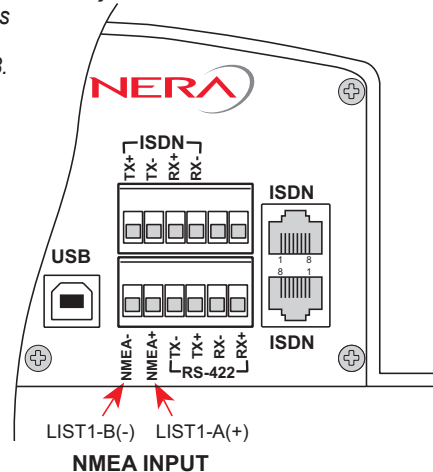
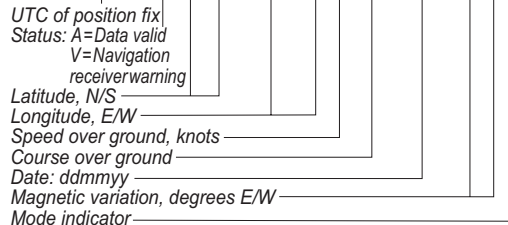





## Mounting connector type 11N-50-3-54 (for cable RG223)

### Tools and materials required:


- Stanley blade
- Scissors
- Solder Sn/Pb 60/40 activated rosin flux
- Spanner
  - 7 mm (74 Z-0-0-38)
  - 8 mm (74 Z-0-0-16)
  - 13 mm (74 Z-0-0-37)

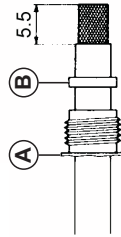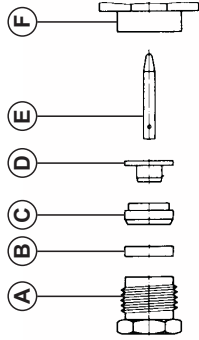


Slide **nut A** and **gasket B** onto cable.  
Prepare cable according to diagram.  
**Caution:** Do not damage braid.

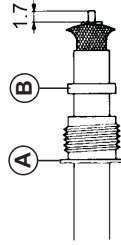


Push braid back and widen it slightly, but do not comb it out. Cut off dielectric 1.7 mm perpendicular to cable axis.

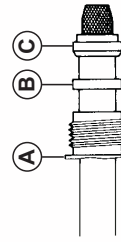

Taper braid towards center conductor.  
Position braid **clamp C** so that its shoulder fits against cable sheath.

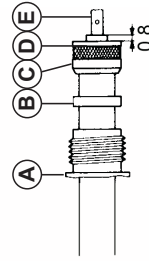

Fold back braid over **clamp C** and trim overlapping braid.  
Slide **clamp D** underneath the braid.  
Check dimension of 0.8 mm.  
Heat inner **contact E** using a soldering iron (approx. 40 W) and flow small amount of tin into bore. Push cable inner conductor into bore, immediately remove soldering iron to prevent melting of the dielectric.

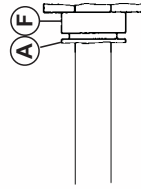



Push prepared cable into **connector body F** and tighten **nut A**.  
Do not rotate cable in connector body.



## Mounting connector type 11N-50-7-5 (for cables RG214 FRNC)

### Tools and materials required:


- Stanley blade
- Scissors

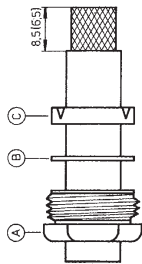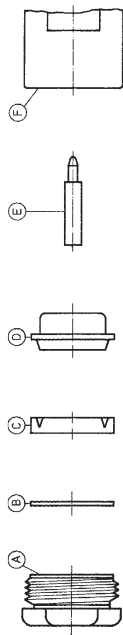

Slide **nut A**, **washer B** and **gasket C** onto cable. Remove 8.5 mm (6.5 mm for angle plugs) of jacket without damaging the braid.


**Cables with double braid:** Remove 9 mm (7 mm for angle plugs) of jacket.

**Armoured cables:** Slide two-piece armour clamp onto cable, instead of nut A. Remove 29 mm (27 mm for angle plugs) of armour.

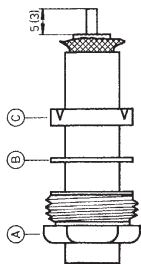


Push braid back and widen it slightly, but do not comb it out. Cut off dielectric 5 mm (3 mm for angle plugs) from end, even and perpendicular to cable axis.

**Caution:** Do not damage centre conductor.

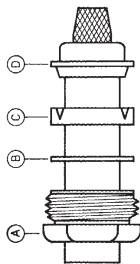


Taper braid towards centre conductor. Position **clamp D** so that its shoulder fits against cable jacket.

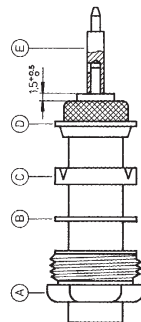

Fold back braid over **clamp D** and cut it off in front of the clamp rim. Check dimension of 1.5 mm. Tin centre conductor of cable.

**Heat contact pin or bush E** with a soldering iron of approx. 250 W. Tin bore hole sufficiently. Insert centre conductor into hole and remove soldering iron quickly in order to prevent dielectric from deformation.

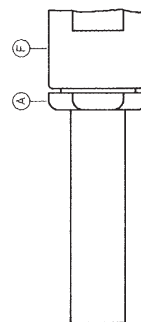

Insert connector body. Screw in and tighten **nut A** with wrenches of 16 mm, type 74Z 0-0-3, until rubber **gasket C** is split. Do not distort cable and connector body.

**Armoured cable:** Finally, screw on and tighten armour clamp.








## Mounting connector type 11N-50-10-4 (for cable S10172 B-11)

### Tools and materials required:


- Stanley blade
- File
- Spanners (18, 20, 22 mm)
- Sand paper (300 or 400)
- Scissors

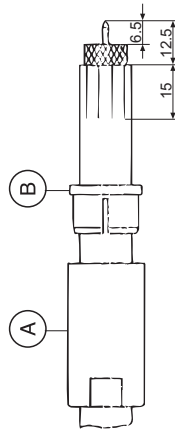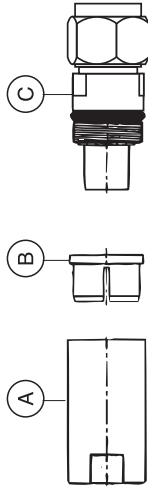

Slide **body A** and **ring B** over cable.  
Prepare **cable** according to figure.  
**CAUTION: Do not damage braid.**  
Trim edge of **centre conductor** with file.  
Cut **jacket** 6-8 times lengthwise 15 mm.  
**CAREFUL: Do not damage braid.**  
**IMPORTANT:** Clean **centre conductor** with sand paper. All dielectric remainders must be removed.

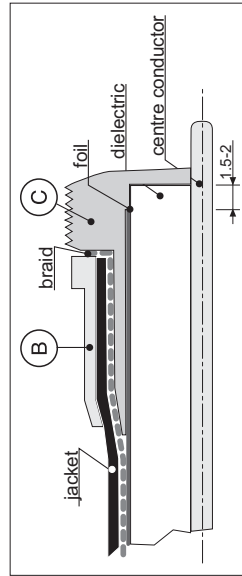


Open **jacket CAREFULLY** and push **sleeve of body C** between **foil** and **braid**.  
Slide **clamp ring B** to **sleeve C**.  
Observe the distance 1.5-2 mm.  
Cut **braid** along **sleeve C**.  
Cut **jacket** lengthwise 6-8 times.  
Cut off protruding foil to front of **sleeve C**.

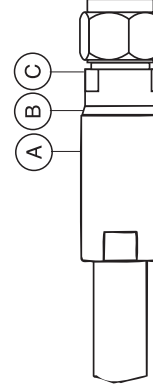

Push **body A** over **clamp ring B**.  
Screw **body D** onto **body A** and tighten with spanner. Torque 19 Nm.





# Mounting connector type 11N-50-12-10 (for cable RF 1/2" 50)

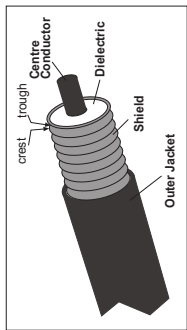


**Tools and materials required:**

- Spanners, 22 mm and 24 mm
- Metal saw
- Knife
- Screwdriver
- Measure
- Abrasive paper
- File

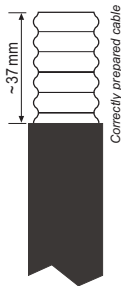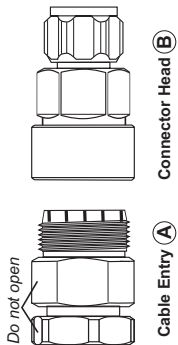



**Preparing the cable**

- Cut the Cable in a trough perpendicularly to the cable axis.
- Remove approx. 37mm of **Outer Jacket**. **IMPORTANT: Do not damage shield.**

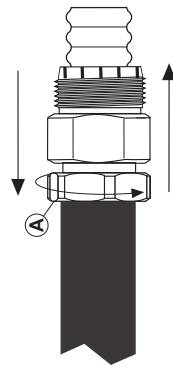


**Mounting the connector**

- Slide the Cable Entry (A) over the cable into the **third trough** in the corrugation. (See figure.)
- Pull the Cable Entry as far as the stop.
- Tighten the back ring of the cable entry manually.
- Verify the correct position of the Cable Entry, if necessary pull forward as far as the stop.

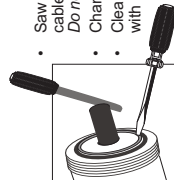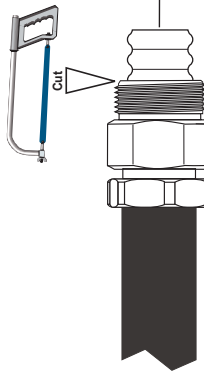


- Saw off the cable carefully along the cable entry as indicated. **Do not damage the centre conductor**
- Chamfer the centre conductor
- Clean the centre conductor carefully with abrasive paper

- Using the screwdriver, press the dielectric away from the outer conductor tube to ensure good contact when entering the connector head.
- Screw the Cable Entry (A) and Connector Head (B) tightly together with a torque of approx. 30 Nm.
- Tighten the back nut of the Cable Entry (A) with a torque of approx. 12 Nm.

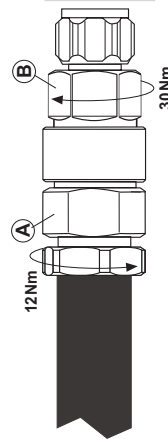

*Note! If exposed to extreme environmental conditions, especially icy conditions, the connector pair should be completely covered with a cold shrink tube (e.g. SUHNER 74 Z-0-0337 or selfvulcanizing tape for added protection.*

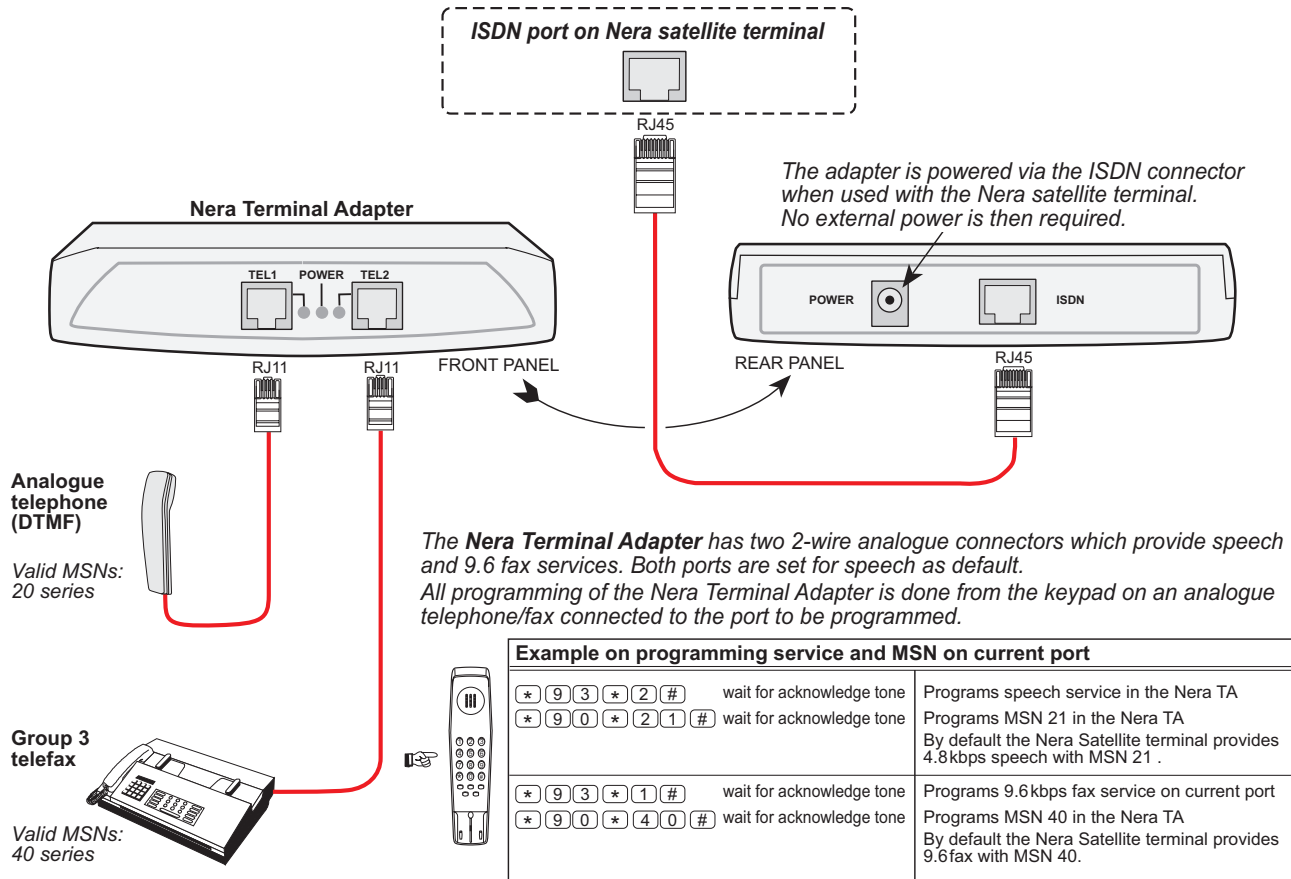


For assigning MSN numbers to the Nera satellite terminal, see the manual/CD in question.



Comments:



Assigning MSN to current port	
* 9 0 * <MSN> #	Assigns MSN into current port
* 9 0 * #	Deletes MSN programmed into current port




Assigning service to a port	
* 9 3 * #	* Resets the service to default factory setting on both ports (the programmed MSN is not reset).
* 9 3 * 2 #	Assigns 4.8kbps speech to the current port.
* 9 3 * 1 #	Assigns 9.6kbps fax to the current port.

\* Default factory settings is 4.8kbps speech.

Notes!

*If the adapter is used with a standard wall ISDN outlet, external power is required. Supply voltage: +9 VDC, 600mA.*

*If mismatch in the programming, the Nera satellite terminal overrides the programming in the Nera Terminal Adapter*

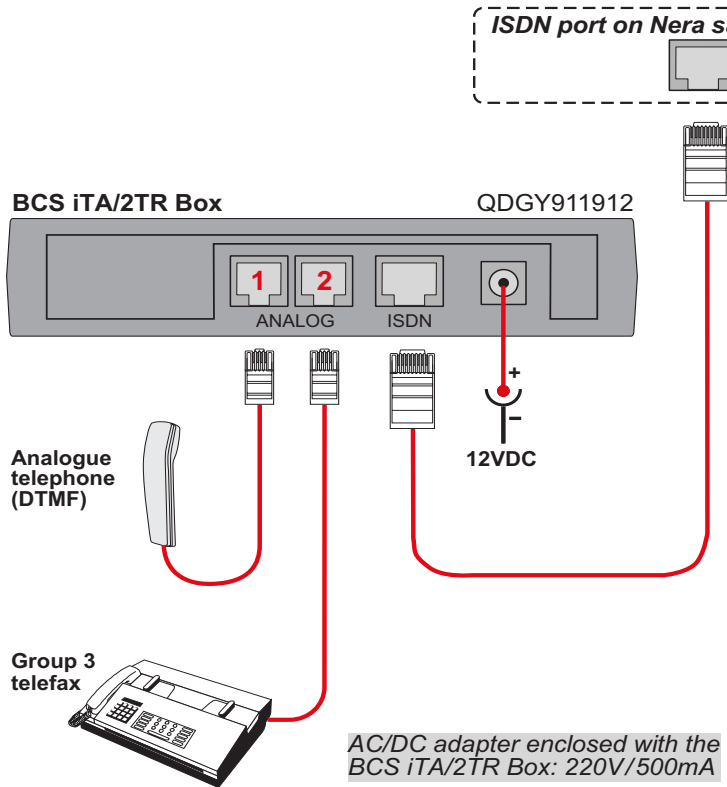

AC/DC adapter enclosed with the BCS iTA/2TR Box: 220V/500mA

For further information, see the BCS iTA/2TR manual.

All programming of the BCS.iTA/2TR box is done with an analogue telephone/fax connected to the one to be programmed (except PIN code which can be programmed from any port).

#### PIN code:

To allow programming, the default 5-digit PIN code 00000 must first be changed using the "90" command. To enter e.g. 01234, dial:

\* 9 0 \* 0 0 0 0 0 \* 0 1 2 3 4 #

↙ command ↙ Default PIN code ↙ New PIN code

#### Assigning an MSN number to a port:

Enter MSN for appropriate service (e.g. MSN 40 = 9.6 kbps fax, MSN 21 = 4.8 speech). Use command 01 to program an MSN number (example):

\* 0 1 \* 0 1 2 3 4 \* 4 0 # ACK TONE

↙ command ↙ PIN code ↙ MSN number

The port now only responds to calls directed to MSN number 40 (see Device Manager in vtLite Marine to select correct MSN).

#### Configuring a port:

The service type must be assigned to a port:

Group 3 telefax: type 4

Analogue telephone or modem: type 2

E.g. to program the port for connection of fax, dial:

\* 0 4 \* 0 1 2 3 4 \* 4 #

↙ command ↙ PIN code ↙ service type 4  
(example) (ex.: group 3 fax)





<b>Term. Id</b>	<b>Service</b>	<b>Inmarsat services</b>
01 - 0F	Voice	<b>B: 16.8, M: 4.8, Mini-M: 4.8, F77, F33, F55: 4.8</b>
11 - 1F	Fax	<b>B: 9.6, M: 2.4, Mini-M: 2.4, F77, F33, F55: 9.6</b>
21 - 2F	ASD	<b>B: 9.6, M: 2.4, Mini-M: 2.4, F33: 9.6</b>
31 - 3F	Telex	<b>B</b>
41 - 4F	HSD	<b>B</b>
51 - 5F	64kData (UDI)	<b>GAN/F77/F55</b>
61 - 6F	3.1kHz Audio	<b>GAN/F77/F55</b>
71 - 7F	56K Data	<b>GAN/F77/F55</b>
	N.C.	
91 - 9F	64K Speech	<b>GAN/F77/F55</b>

*Terminal Identities and the corresponding Inmarsat Services.*

*Note! MPDS is given the Terminal Id: A1 (not programmable)*







[Back to Start Page](#) 

**Nera ASA**

**Nera SatCom AS**

Bergerveien 12, PO Box 91  
N-1375 Billingstad, Norway

Tel: +47 67 24 47 00

Fax: +47 67 24 46 21

[www.nera.no](http://www.nera.no)



enabling a wireless future